



OPERATING INSTRUCTIONS

KATflow 100

Standard Clamp-On Ultrasonic Flow Transmitter



KATflow 100

Operating Instructions

Katronic Technologies Ltd.
Earls Court
Warwick Street
Coventry CV5 6ET
United Kingdom

Tel. +44 (0)2476 714 111
Fax +44 (0)2476 715 446
E-mail info@katronic.co.uk
Web www.katronic.com

TABLE OF CONTENTS

| | | | |
|--|----|---|----|
| 1 SAFETY INSTRUCTIONS, LEGAL REQUIREMENTS, WARRANTY, RETURN POLICY | 4 | 5 COMMISSIONING | 28 |
| 1.1 Symbols | 4 | 5.1 Menu structure | 28 |
| 1.2 Safety instructions | 4 | 5.2 Output configuration | 37 |
| 1.3 Warranty | 5 | 5.2.1 Serial interface | 37 |
| 1.4 Return policy | 5 | 5.2.2 Modbus RTU | 37 |
| 1.5 Legislative requirements | 5 | 5.2.3 HART® compatible output | 38 |
| 2 INTRODUCTION | 6 | 5.2.4 Analogue current output 0/4 ... 20 mA | 38 |
| 2.1 Clamp-on transit-time flowmeter | 6 | 5.2.5 Analogue voltage output 0 ... 10 V | 39 |
| 2.2 Measuring principle | 6 | 5.2.6 Analogue frequency output (passive) | 39 |
| 3 INSTALLATION | 7 | 5.2.7 Digital open-collector output | 39 |
| 3.1 Unpacking and storage | 7 | 5.2.8 Digital relay output | 40 |
| 3.1.1 Unpacking | 7 | 5.3 Input configuration | 41 |
| 3.1.2 Storage | 7 | 5.3.1 Pt 100 inputs | 41 |
| 3.1.3 Identification of components | 7 | 5.3.2 Analogue current input 0/4 ... 20 mA | 41 |
| 3.2 Clamp-on sensor installation | 8 | 5.4 Temperature compensation | 42 |
| 3.2.1 Acoustic propagation | 8 | 5.5 Heat quantity measurement | 42 |
| 3.2.2 Straight pipe lengths | 8 | 5.6 Sound velocity measurement | 42 |
| 3.3 Installation location | 9 | 5.7 Scope function | 42 |
| 3.4 Pipe preparation | 11 | 5.8 KATdata+ software | 42 |
| 3.5 Sensor mounting configurations and separation distance | 12 | 6 MAINTENANCE | 43 |
| 3.5.1 Reflection Mode | 12 | 6.1 Service/Repair | 43 |
| 3.5.2 Diagonal Mode | 12 | 7 TROUBLESHOOTING | 44 |
| 3.5.3 Transducer separation distance | 12 | 7.1 Measurement difficulties and error messages | 44 |
| 3.6 Flowmeter installation | 13 | 7.2 Data download difficulties | 46 |
| 3.6.1 Outline dimensions | 13 | 8 TECHNICAL DATA | 47 |
| 3.6.2 Electrical connections | 15 | 8.1 Sound speed of selected pipe materials | 47 |
| 3.7 Clamp-on sensor mounting | 18 | 8.2 Technical data of selected fluids | 48 |
| 3.7.1 Acoustic coupling gel | 18 | 8.3 Dependence between temperature and sound speed in water | 51 |
| 3.7.2 Correct positioning of the sensors | 19 | 9 SPECIFICATION | 54 |
| 3.7.3 Sensor mounting with tension straps | 19 | 9.1 General | 54 |
| 4 OPERATION | 21 | 9.2 Flowmeter | 54 |
| 4.1 Switching On/Off | 21 | 9.3 Quantity and units of measurement | 55 |
| 4.2 Keypad and display | 21 | 9.4 Internal data logger | 55 |
| 4.2.1 Keypad key functions | 21 | 9.5 Communication | 55 |
| 4.2.2 Display icons and functions | 22 | 9.6 KATdata+ software | 55 |
| 4.3 Quick Setup Wizard | 24 | 9.7 Process inputs | 56 |
| 4.4 Measurement | 26 | 9.8 Process outputs | 56 |
| 4.4.1 Main process value display | 26 | 9.9 Sensors: K1P, K1L, K1N, K1E | 57 |
| 4.4.2 Three-line display | 26 | 9.10 Sensors: K4L, K4N, K4E | 57 |
| 4.4.3 Totaliser | 26 | 10 INDEX | 58 |
| 4.4.4 Diagnostic display | 27 | 11 APPENDIX A – Certificate of Conformity | 59 |
| 4.4.5 Data logger | 27 | 12 APPENDIX B – Customer Return Note (CRN) | 60 |

1 SAFETY INSTRUCTIONS, LEGAL REQUIREMENTS, WARRANTY, RETURN POLICY

1.1 Symbols



Danger

This symbol represents an immediate hazardous situation which could result in serious injury, death or damage to the equipment. Where this symbol is shown, do not use the equipment further unless you have fully understood the nature of the hazard and have taken the required precautions.



Attention

This symbol indicates important instructions which should be respected in order to avoid damaging or destroying the equipment. Follow the precautions given in these instructions to avoid the hazard. Call our service team if necessary.



Call service

Where this symbol is shown call our service team for advice if necessary.



Note

This symbol indicates a note or detailed setup tip.

ESC Operator key

Operator keys are printed in bold typeface.

1.2 Safety instructions

- Do not install, operate or maintain this flowmeter without reading, understanding and following these operating instructions, otherwise injury or damage may result.
- Study these operating instructions carefully before the installation of the equipment and keep them for future reference.
- Observe all warnings, notes and instructions as marked on the packaging, on the equipment, and detailed in the operating instructions.
- Follow the unpacking, storage and preservation instructions to avoid damage to the equipment.
- Install the equipment and cabling securely and safely according to the relevant regulations.
- If the product does not operate normally, please refer to the service and troubleshooting instructions, or contact Katronic for help.

SAFETY INSTRUCTIONS, LEGAL REQUIREMENTS, WARRANTY, RETURN POLICY

1.3 Warranty

- Any product purchased from Katronic is warranted in accordance with the relevant product documentation and as specified in the sales contract provided. This is subject to the condition that it has been used for the purpose for which it has been designed and operated as outlined in these operating instructions. Misuse of the equipment will immediately revoke any warranty given or implied.
- Responsibility for suitability and intended use of this ultrasonic flowmeter rests solely with the user. Improper installation and operation of the flowmeter may lead to a loss of warranty.
- Please note that there are no operator-serviceable parts inside the equipment. Any unauthorised interference with the product will invalidate the warranty.

1.4 Return policy

If the flowmeter has been diagnosed to have a problem, it can be returned to Katronic for repair using the Customer Return Note (CRN) attached to the Appendix of this manual. Katronic regret that for health and safety reasons we cannot accept the return of the equipment unless accompanied by the completed CRN.

1.5 Legislative requirements



CE Marking

The flowmeter is designed to meet the safety requirements in accordance with sound engineering practice. It has been tested and has left the factory in a condition in which it is safe to operate. The equipment is in conformity with the statutory requirements of the EC directive and complies with applicable regulations and standards for electrical safety EN 61010 and electromagnetic compatibility EN 61326. A CE Declaration of Conformity has been issued in that respect, a copy of which can be found in the Appendix of these operating instructions.



WEEE Directive

The Waste Electrical and Electronic Equipment Directive (WEEE Directive 2012/19/EU) aims to minimise the impact of electrical and electronic goods on the environment by increasing re-use and recycling and by reducing the amount of WEEE going to landfill. It seeks to achieve this by making producers responsible for financing the collection, treatment, and recovery of waste electrical equipment, and by obliging distributors to allow consumers to return their waste equipment free of charge. Katronic offers its customers the possibility of returning unused and obsolete equipment for correct disposal and recycling. The dustbin symbol indicates that when the last user wishes to discard this product, it must be sent to appropriate facilities for recovery and recycling. By not discarding this product along with other household-type waste, the volume of waste sent to incinerators or landfills will be reduced and natural resources will be conserved. Please use the Customer Return Note (CRN) in the Appendix for return to Katronic.



RoHS Directive

All products manufactured by Katronic are compliant with the relevant aspects of the RoHS Directive.


KATflow 100

INTRODUCTION

2 INTRODUCTION

2.1 Clamp-on transit-time flowmeter


The KATflow 100 is an ultrasonic flow transmitter employing clamp-on sensors for the measurement of liquids in full, enclosed pipes. Flow measurements can be undertaken without interruption of the process or interference with the integrity of the pipeline. The clamp-on sensors are attached to the outside of the pipes. The KATflow 100 uses ultrasonic signals for measurement of the flow, employing the transit-time method.

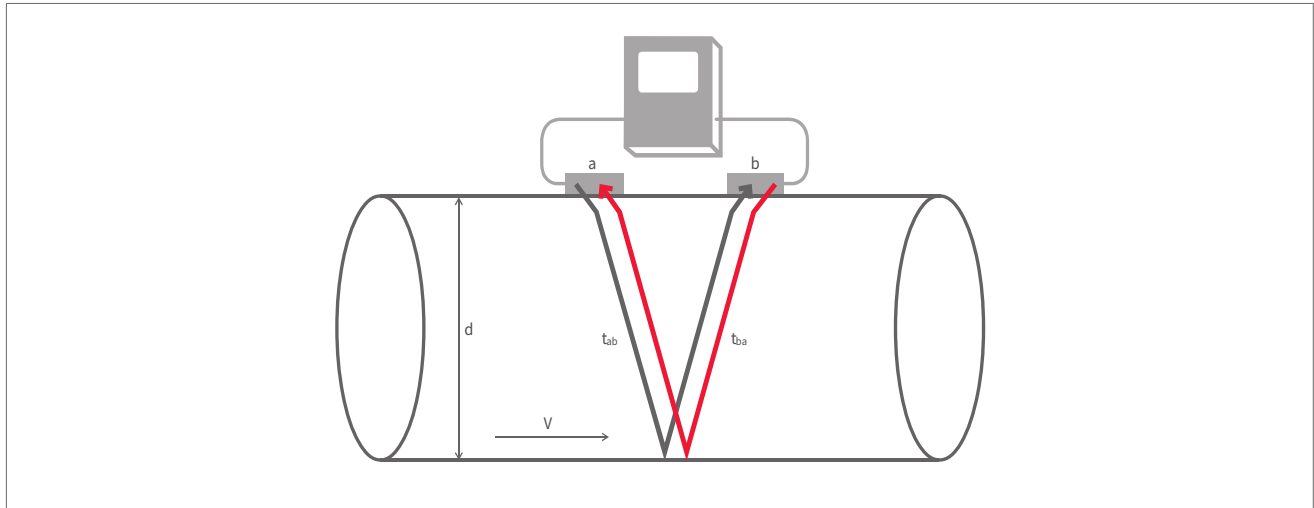

Picture 1: Clamp-on ultrasonic flowmeter configuration

2.2 Measuring principle

Ultrasonic signals are emitted by a transducer installed on a pipe and received by a second transducer. These signals are emitted alternately in the direction of flow and against it. Because the medium is flowing, the transit time of the sound signals propagating in the direction of flow is shorter than the transit time of the signal propagating against the direction of flow. The transit-time difference Δt is measured and allows the determination of the average flow velocity along the path of acoustic propagation. A profile correction is then performed to obtain the average flow velocity over the cross-sectional area of the pipe, which is proportional to the volumetric flow rate.

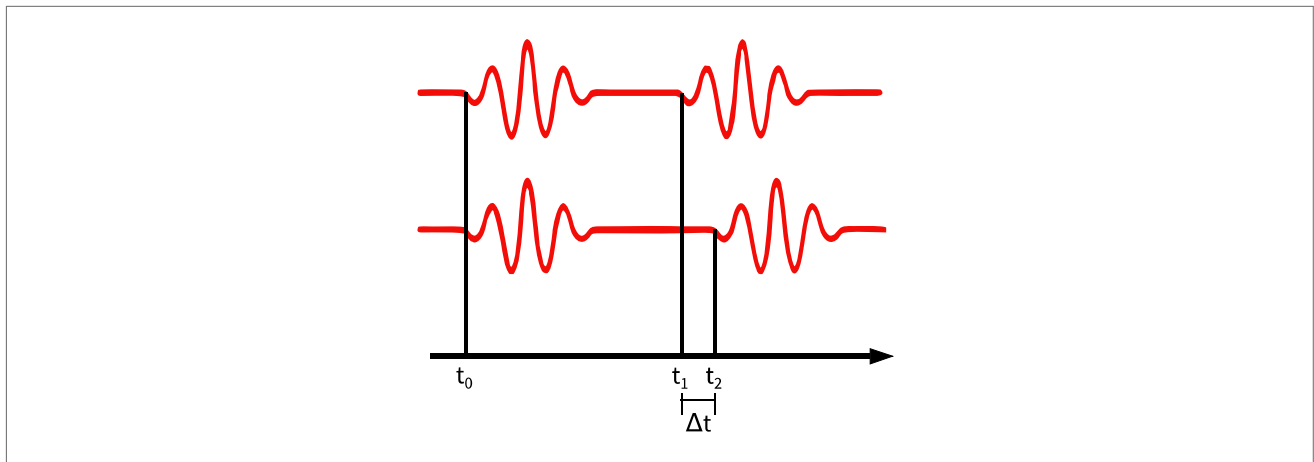

Picture 2: Transit-time measuring principle

3 INSTALLATION

3.1 Unpacking and storage

3.1.1 Unpacking

Care should be taken when opening the box containing the flowmeter, any markings or warnings shown on the packaging should be observed prior to opening. The following steps should then be taken:

- Unpack the flowmeter in a dry area.
- The flowmeter should be handled with care and not left in an area where it could be subject to physical shocks.
- If using a knife to remove packaging care should be taken not to damage the flowmeter or cables.
- The flowmeter package and contents should be checked against the delivery note supplied and any missing items reported immediately.
- The flowmeter package and contents should be checked for signs of damage during transport and any problems reported immediately.
- The vendor accepts no responsibility for damage or injury caused during the unpacking of the instrumentation supplied.
- Excess packing materials should be either recycled or disposed of in a suitable way.

3.1.2 Storage

If storage is necessary, the flowmeter and sensors should be stored:

- in a secure location,
- away from water and harsh environmental conditions,
- in such a way as to avoid damage,
- small items should be kept together in the bags and small plastic boxes provided to avoid loss.

3.1.3 Identification of components

The following items are typically supplied (please refer to your delivery note for a detailed description):

- KATflow 100 ultrasonic flow transmitter,
- Clamp-on sensors (usually one pair depending on pipe sizes to be measured),
- Sensor extension cable(s) (optional),
- Sensor mounting accessories,
- Coupling component,
- Operating instructions,
- Project and/or hazardous area documentation (optional),
- Calibration certificate(s) (optional),
- Temperature measurement probe(s) (optional).

KATflow 100

INSTALLATION

3.2 Clamp-on sensor installation

The correct selection of the sensor location is crucial for achieving reliable measurements and high accuracy. Measurement must take place on a pipe in which sound can propagate (see Section 3.2.1 Acoustic propagation) and in which a rotationally symmetrical flow profile is fully developed (see Section 3.2.2 Straight pipe lengths).

The correct positioning of the transducers is an essential condition for error-free measurements. It ensures that the sound signal will be received under optimal conditions and evaluated correctly. Because of the variety of applications and the different factors influencing the measurement, there can be no standard solution for the positioning of the transducers.

The correct position of the transducers will be influenced by the following factors:

- diameter, material, lining, wall thickness and general condition of the pipe,
- the medium flowing in the pipe,
- the presence of gas bubbles and solid particles in the medium.

After the sensor location has been selected, make sure that the supplied cable is long enough to reach the flow transmitter mounting location.



Check that the temperature at the selected location is within the operating temperature range of the transducers (see Chapter 9).

3.2.1 Acoustic propagation

Acoustic propagation is achieved when the flowmeter is able to receive sufficient signal from the transmitted ultrasonic pulses. The signals are attenuated in the pipe material, the medium and at each of the interfaces and reflections. External and internal pipe corrosion, solid particles and gas content in the medium contribute heavily to signal attenuation.

3.2.2 Straight pipe lengths

Sufficient straight lengths of pipe on the inlet and outlet of the measuring location ensure an axi-symmetrical flow profile in the pipe, which is required for good measurement accuracy. If insufficient straight lengths of pipe are available for your application measurements are still obtainable, but the certainty of the measurement can be reduced.

3.3 Installation location

Select an installation location following the recommendations in Table 1 and try to avoid measuring:



- in the vicinity of deformations and defects of the pipe,
- near welding seams,
- where deposits could be building up in the pipe.

| | |
|---|--|
| <p>For a horizontal pipe: Select a location where the transducers can be mounted on the side of the pipe, so that the sound waves emitted by the transducers propagate horizontally in the pipe. In this way, the solid particles deposited on the bottom of the pipe and the gas pockets developing at the top will not influence the propagation of the signal.</p> | |
| | |
| <p>For a free inlet or outlet pipe section: Select the measuring point at a location where the pipe cannot run empty.</p> | |
| | |
| | |
| <p>For a vertical pipe: Select the measuring point at a location where the liquid flows upward to ensure that the pipe is completely filled.</p> | |
| | |











Table 1: Recommendations for sensor mounting location



Look for a sensor installation location with sufficient straight pipe to obtain accurate measurements. Please refer to Table 2 as a guideline for recommended distances from disturbance sources.

KATflow 100

INSTALLATION
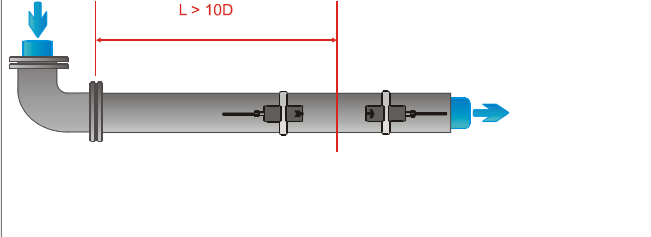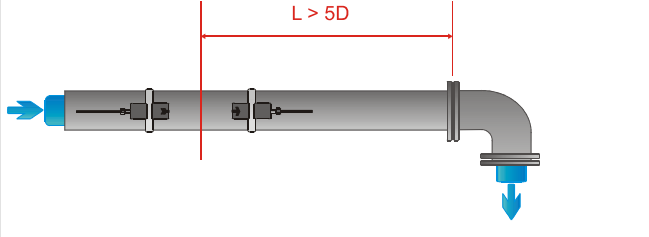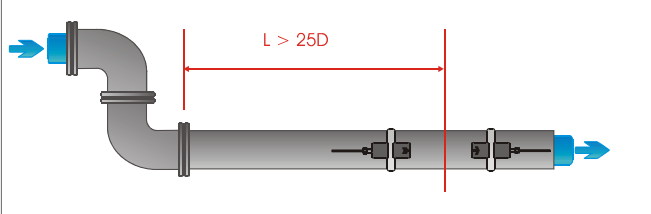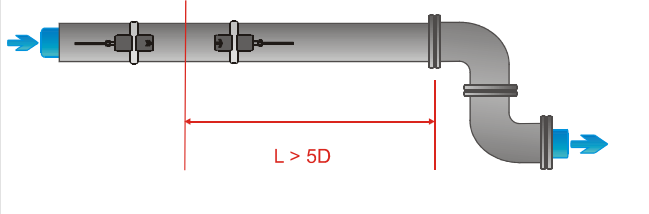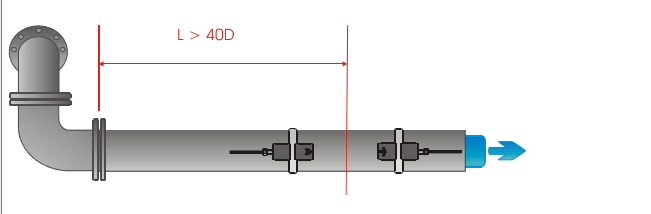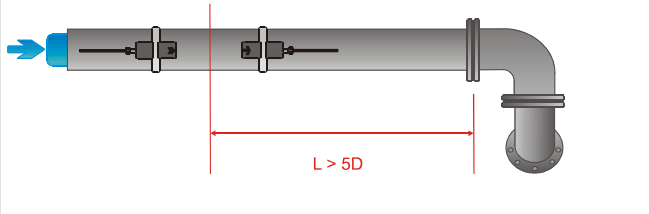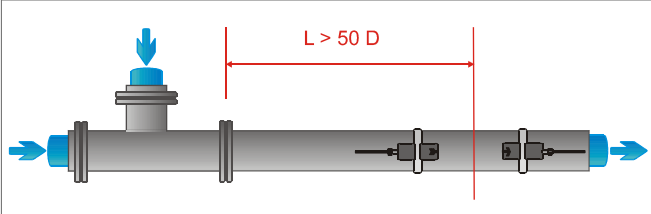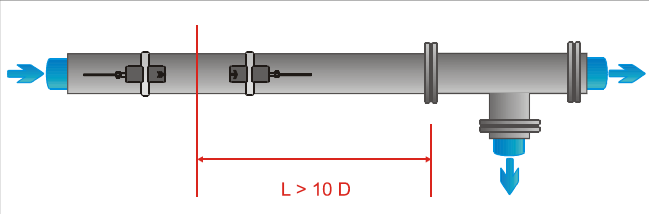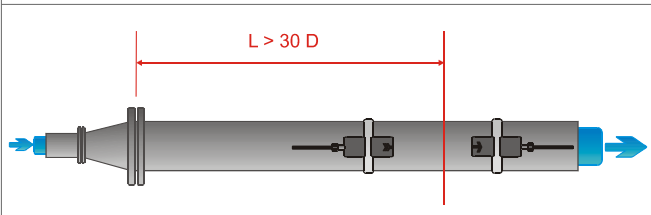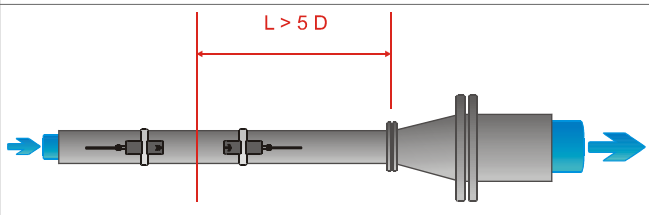
| | |
|--|--|
| <p>Disturbance source: 90°-elbow Inlet $L \geq 10D$</p> | <p>Outlet $L \geq 5D$</p> |
|  |  |
| <p>Disturbance source: 2 x 90°-elbow in one plane Inlet $L \geq 25D$</p> | <p>Outlet $L \geq 5D$</p> |
|  |  |
| <p>Disturbance source: 2 x 90°-elbow in different planes Inlet $L \geq 40D$</p> | <p>Outlet $L \geq 5D$</p> |
|  |  |
| <p>Disturbance source: T-section Inlet $L \geq 50D$</p> | <p>Outlet $L \geq 10D$</p> |
|  |  |
| <p>Disturbance source: diffuser Inlet $L \geq 30D$</p> | <p>Outlet $L \geq 5D$</p> |
|  |  |





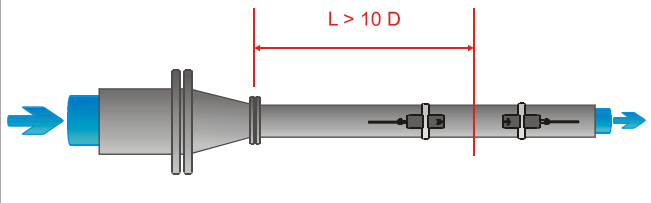
| | |
|---|--|
| Disturbance source: reducer Inlet $L \geq 10D$ | Outlet $L \geq 5D$ |
|  |  |
| Disturbance source: valve Inlet $L \geq 40D$ | Outlet $L \geq 10D$ |
|  |  |
| Disturbance source: pump Inlet $L \geq 50D$ | |
|  | |

Table 2: Recommended distances from disturbance sources

3.4 Pipe preparation

- Clean dirt and dust from around the area of the pipework where the sensors are to be placed.
- Remove loose paint and rust with a wire brush or file.
- Firmly bonded paint does not necessarily need to be removed provided the flowmeter diagnostics indicate sufficient signal strength.

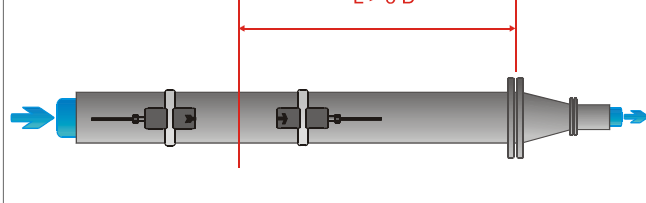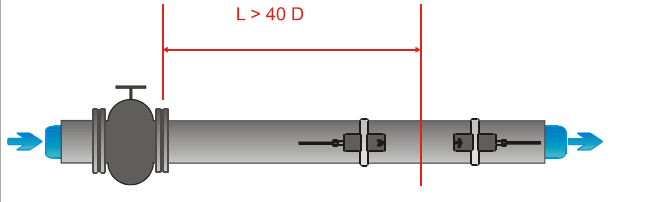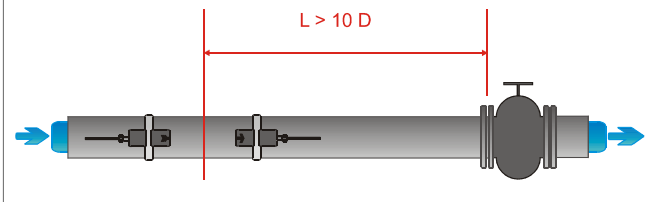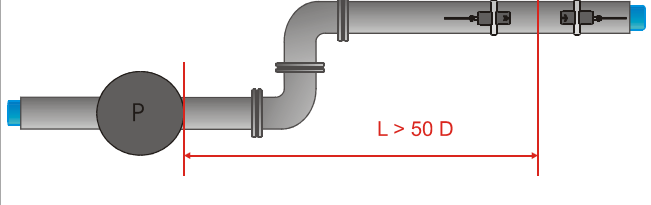


KATflow 100

INSTALLATION

3.5 Sensor mounting configurations and separation distance

3.5.1 Reflection Mode

The most common clamp-on sensor mounting configuration is the Reflection Mode, sometimes known as V-Mode (see Picture 3, sketch 1). Here, the ultrasonic signal passes twice through the medium (two signal passes). The Reflection Mode is the most convenient mounting method as the transducer separation distance can be measured easily and the sensors can be accurately aligned. This method should be used whenever possible.

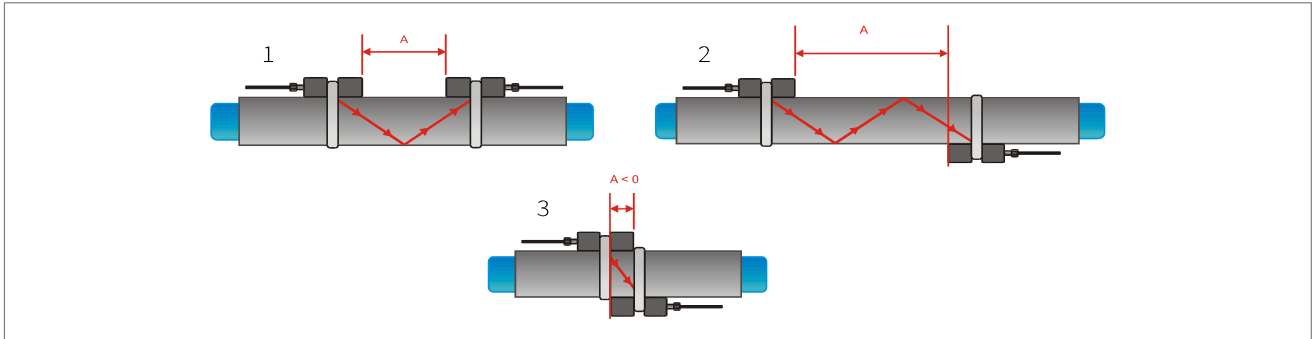

Picture 3: Clamp-on sensor mounting configurations and sensor spacing

3.5.2 Diagonal Mode

An alternative mounting configuration (see Picture 3, sketch 3) is the Diagonal Mode (Z-Mode). The signals travel only once through the pipe. This method is often used for larger pipes where greater signal attenuation might occur.

Further variation of the Reflection and the Diagonal Modes are possible by altering the number of passes through the pipe. Any even number of passes will require mounting the sensors on the same side of the pipe, while with an odd number of passes, the sensors must be mounted on opposite sides of the pipe. Commonly, for very small pipes, sensor mounting configurations such as four passes (W-Mode) or three passes (N-Mode) are used (see Picture 3, sketch 2).

3.5.3 Transducer separation distance

The transducer separation distance A is measured from the inside edges of the sensor heads as shown (see Picture 3). It is automatically calculated by the flowmeter based on the parameter entries for pipe outside diameter, wall thickness, lining material and thickness, medium, process temperature, the sensor type and the selected number of signal passes.




A negative separation distance $A < 0$ can occur for mounting configurations on small pipes where Diagonal Mode operation has been selected (see Picture 3, sketch 3). Negative separation distances may be suggested for Reflection Mode installations, but are not possible. In these cases, use Diagonal Mode or a larger number of passes.

3.6 Flowmeter installation

3.6.1 Outline dimensions


The KATflow 100 is a wall mounted device and can be installed using suitable screws and wall plugs according to the following drawings (Picture 4 and 5).

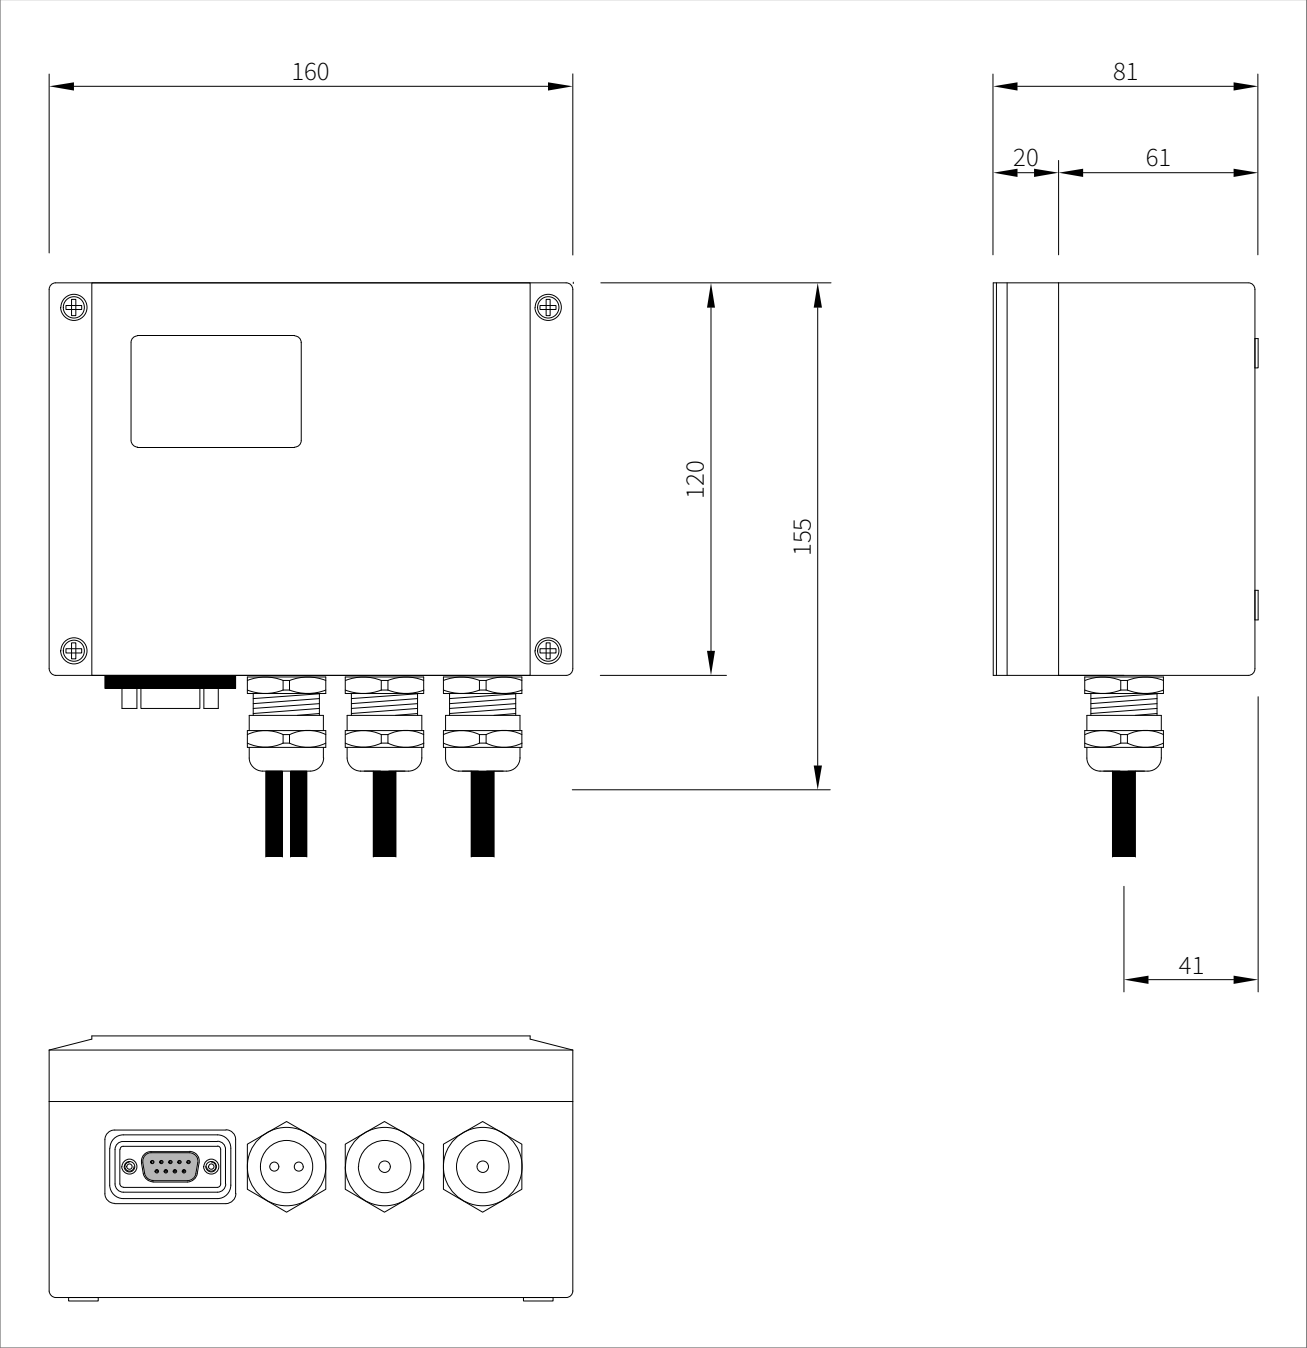

Picture 4: Outline dimensions KATflow 100

KATflow 100


INSTALLATION

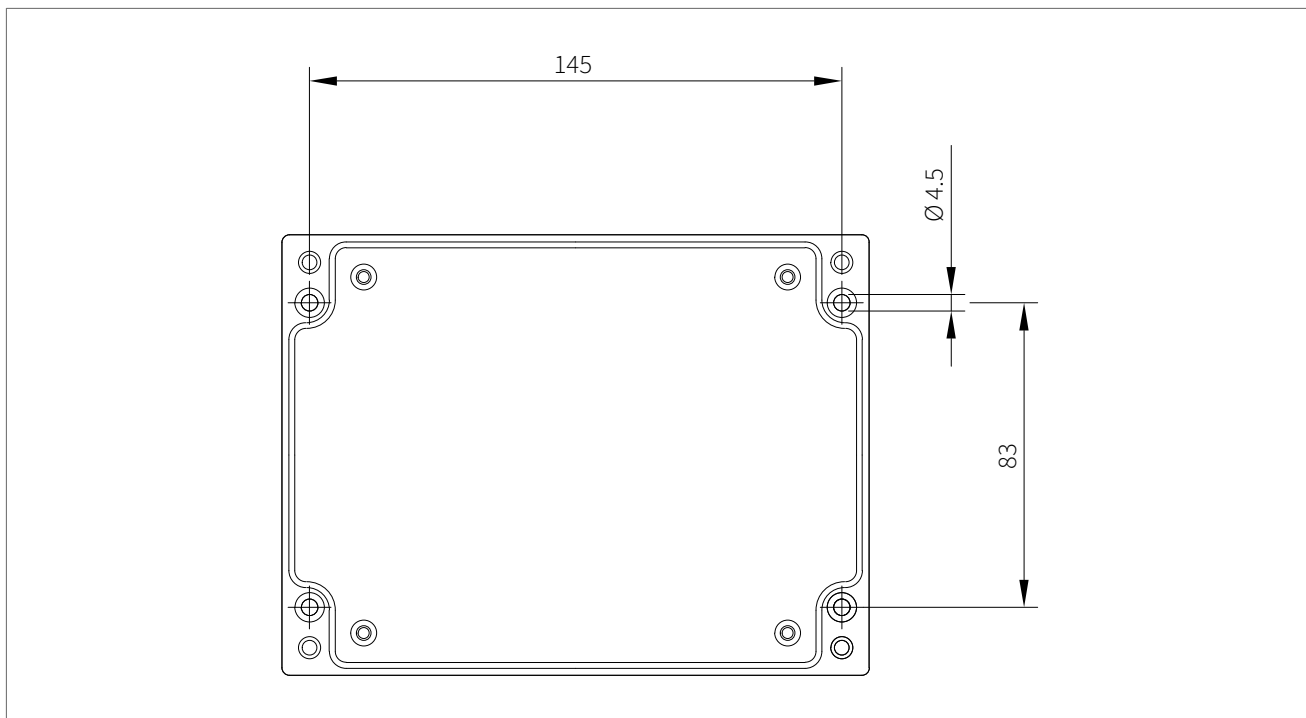

Picture 5: Drilling aid for wall mounting KATflow 100



Make sure that the ambient temperature is within the -10 ... +60 °C operating temperature range specified for the flowmeter unit.

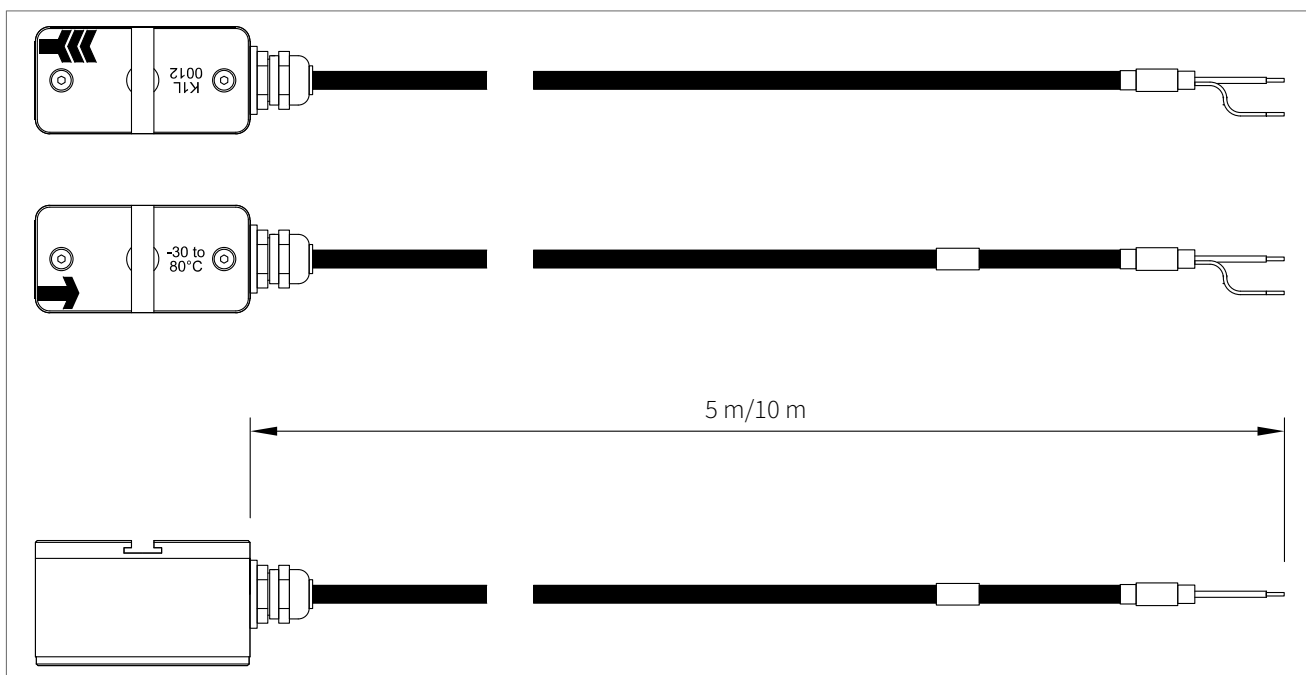

Picture 6: K1L type transducers (example)

3.6.2 Electrical connections

Please note that in order to supply the unit with mains power, the equipment must be protected by suitably sized switches and circuit breakers. Additional protection measures have to be taken, if the system is exposed to lightning strikes and/or occurrence of over-voltage spikes.



| | |
|----------------------------|-------|
| 100 ... 240 V AC, 50/60 Hz | 10 VA |
| 9 ... 36 V DC | 10 W |

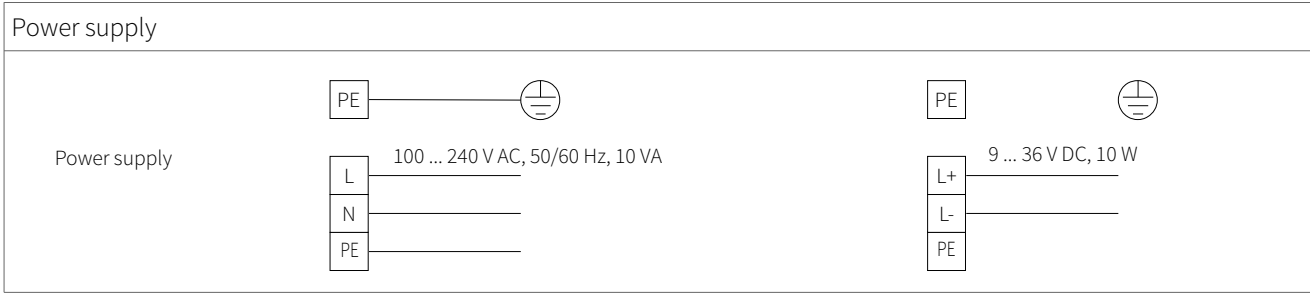


Table 3: Electrical diagram power supply for the KATflow 100 flow transmitter

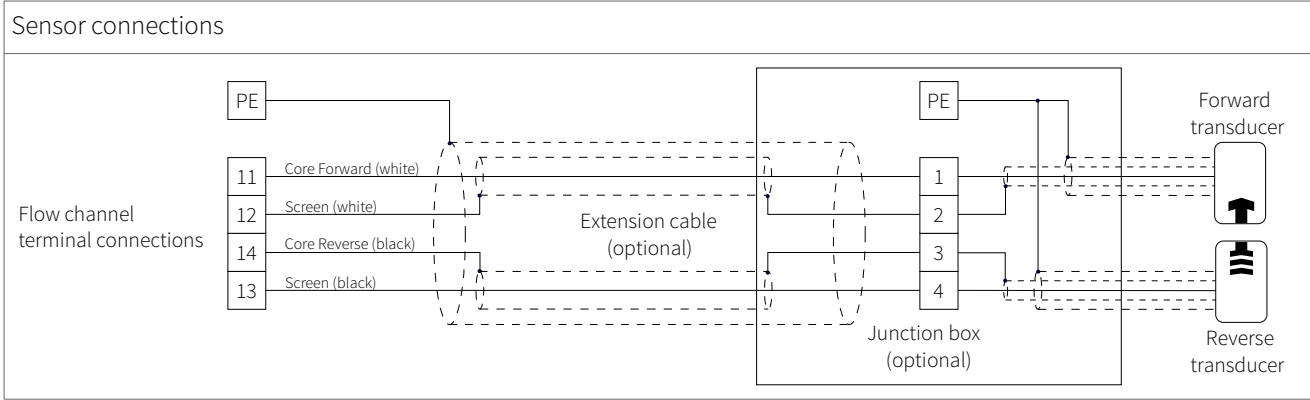


Table 4: Electrical diagram sensor connection for the KATflow 100 flow transmitter

KATflow 100

INSTALLATION

Process outputs:
4 slots are available for input/output cards, 1 slot reserved for communication (Slot 1 to 5, terminals marked SK1 to SK5, each numbered 1 to 4)

| | | |
|--|--|---|
| Passive current output (optional) | | 4 ... 20 mA, load < 500 Ω |
| Active current output (optional) | | 0/4 ... 20 mA, load < 500 Ω |
| Voltage output (optional) | | 0 ... 10 V |
| Frequency (analogue output) (optional) | | 2 ... 10 000 Hz |
| Digital output "Open-Collector" (optional) | | Configurable Error, Limit, Total Pulse |
| Digital relay output (optional) | | Configurable Error, Limit, Total Pulse |

Table 5: Electrical diagram process outputs for the KATflow 100 flow transmitter

| | | | | | | | | | | |
|---|--|-------|---|--|----------|---|----------|---|-------|---|
| <p>Process inputs: 4 slots are available for input/output cards, 1 slot reserved for communication (Slot 1 to 5, terminals marked SK1 to SK5, each numbered 1 to 4)</p> | | | | | | | | | | |
| Passive analogue input (optional) | <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 10%; text-align: right;">-</td> <td style="width: 10%; border: 1px solid black; text-align: center;">1</td> <td rowspan="4" style="width: 10%; vertical-align: middle;"> </td> </tr> <tr> <td style="text-align: right;">I_{in}</td> <td style="border: 1px solid black; text-align: center;">2</td> </tr> <tr> <td style="text-align: right;">I_{in}</td> <td style="border: 1px solid black; text-align: center;">3</td> </tr> <tr> <td style="text-align: right;">30 V</td> <td style="border: 1px solid black; text-align: center;">4</td> </tr> </table> | - | 1 | | I_{in} | 2 | I_{in} | 3 | 30 V | 4 |
| - | 1 | | | | | | | | | |
| I_{in} | 2 | | | | | | | | | |
| I_{in} | 3 | | | | | | | | | |
| 30 V | 4 | | | | | | | | | |
| Active analogue input (optional) | <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 10%; text-align: right;">-</td> <td style="width: 10%; border: 1px solid black; text-align: center;">1</td> <td rowspan="4" style="width: 10%; vertical-align: middle;"> </td> </tr> <tr> <td style="text-align: right;">I_{in}</td> <td style="border: 1px solid black; text-align: center;">2</td> </tr> <tr> <td style="text-align: right;">I_{in}</td> <td style="border: 1px solid black; text-align: center;">3</td> </tr> <tr> <td style="text-align: right;">30 V</td> <td style="border: 1px solid black; text-align: center;">4</td> </tr> </table> | - | 1 | | I_{in} | 2 | I_{in} | 3 | 30 V | 4 |
| - | 1 | | | | | | | | | |
| I_{in} | 2 | | | | | | | | | |
| I_{in} | 3 | | | | | | | | | |
| 30 V | 4 | | | | | | | | | |
| Temperature input Pt 100 4-wire (optional) | <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 10%; text-align: right;">-FEED</td> <td style="width: 10%; border: 1px solid black; text-align: center;">1</td> <td rowspan="4" style="width: 10%; vertical-align: middle;"> </td> </tr> <tr> <td style="text-align: right;">-R</td> <td style="border: 1px solid black; text-align: center;">2</td> </tr> <tr> <td style="text-align: right;">+R</td> <td style="border: 1px solid black; text-align: center;">3</td> </tr> <tr> <td style="text-align: right;">+FEED</td> <td style="border: 1px solid black; text-align: center;">4</td> </tr> </table> | -FEED | 1 | | -R | 2 | +R | 3 | +FEED | 4 |
| -FEED | 1 | | | | | | | | | |
| -R | 2 | | | | | | | | | |
| +R | 3 | | | | | | | | | |
| +FEED | 4 | | | | | | | | | |

Table 6: Electrical diagram process inputs for the KATflow 100 flow transmitter

| | | | | | | | | | | |
|--------------------------------------|---|----|---|--|----|---|-----|---|----|---|
| <p>Communication</p> | | | | | | | | | | |
| RS 232 9-pin D-type serial interface | <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 10%; text-align: right;">Tx</td> <td style="width: 10%; border: 1px solid black; text-align: center;">1</td> <td rowspan="3" style="width: 10%; vertical-align: middle;"> </td> </tr> <tr> <td style="text-align: right;">Rx</td> <td style="border: 1px solid black; text-align: center;">2</td> </tr> <tr> <td style="text-align: right;">GND</td> <td style="border: 1px solid black; text-align: center;">5</td> </tr> </table> <p style="text-align: center;">For on- and offline data transfer, diagnostics, firmware updates</p> | Tx | 1 | | Rx | 2 | GND | 5 | | |
| Tx | 1 | | | | | | | | | |
| Rx | 2 | | | | | | | | | |
| GND | 5 | | | | | | | | | |
| Modbus RTU slave | <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 10%; text-align: right;">B</td> <td style="width: 10%; border: 1px solid black; text-align: center;">1</td> <td rowspan="4" style="width: 10%; vertical-align: middle;"> </td> </tr> <tr> <td style="text-align: right;">A</td> <td style="border: 1px solid black; text-align: center;">2</td> </tr> <tr> <td style="text-align: right;">A</td> <td style="border: 1px solid black; text-align: center;">3</td> </tr> <tr> <td style="text-align: right;">B</td> <td style="border: 1px solid black; text-align: center;">4</td> </tr> </table> <p style="text-align: right;">Master device Terminating 100 Ω resistor</p> | B | 1 | | A | 2 | A | 3 | B | 4 |
| B | 1 | | | | | | | | | |
| A | 2 | | | | | | | | | |
| A | 3 | | | | | | | | | |
| B | 4 | | | | | | | | | |
| HART® compatible output (optional) | <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 10%; text-align: right;">I-</td> <td style="width: 10%; border: 1px solid black; text-align: center;">1</td> <td rowspan="4" style="width: 10%; vertical-align: middle;"> </td> </tr> <tr> <td style="text-align: right;">I-</td> <td style="border: 1px solid black; text-align: center;">2</td> </tr> <tr> <td style="text-align: right;">I+</td> <td style="border: 1px solid black; text-align: center;">3</td> </tr> <tr> <td style="text-align: right;">I+</td> <td style="border: 1px solid black; text-align: center;">4</td> </tr> </table> <p style="text-align: center;">220 Ω resistor</p> <p style="text-align: center;">HART modem</p> | I- | 1 | | I- | 2 | I+ | 3 | I+ | 4 |
| I- | 1 | | | | | | | | | |
| I- | 2 | | | | | | | | | |
| I+ | 3 | | | | | | | | | |
| I+ | 4 | | | | | | | | | |

Table 7: Electrical diagram communication options for the KATflow 100 flow transmitter

KATflow 100

INSTALLATION

3.7 Clamp-on sensor mounting

Before the sensors can be mounted

- the installation location should have been determined,
- a sensor mounting method should be chosen,
- the flowmeter must be mechanically and electrically installed,
- the sensors must be connected to the transmitter.

Depending on which sensor mounting method is being used, the clamp-on sensors are either mounted on the same side of the pipe (Reflection Mode) or on opposite sides of the pipe (Diagonal Mode). The sensor spacing is calculated by the flowmeter from the pipe parameters entered (see Section 3.5).

3.7.1 Acoustic coupling gel



In order to obtain acoustical contact between the pipe and the sensors, apply a bead of acoustic coupling gel lengthwise down the centre of the contact area of the sensors.




Picture 7: Application of acoustic coupling gel

3.7.2 Correct positioning of the sensors



Always mount the transducer pair so that the free front edges of the sensors face each other. There is a different engraving on the top of each transducer. The transducers are mounted correctly if the engravings on the two transducers form an arrow. The transducer cables should point in opposite directions. Later, the arrow, in conjunction with the indicated measured value, will help to determine the direction of flow (see Section 3.3).

The sensor separation distance is automatically calculated by the flowmeter based on the parameter entries for pipe outside diameter, wall thickness, lining material and thickness, medium, process temperature, the sensor type and the selected number of signal passes. The sensor positioning screen (see Section 4.3) allows fine adjustment of the sensor location.

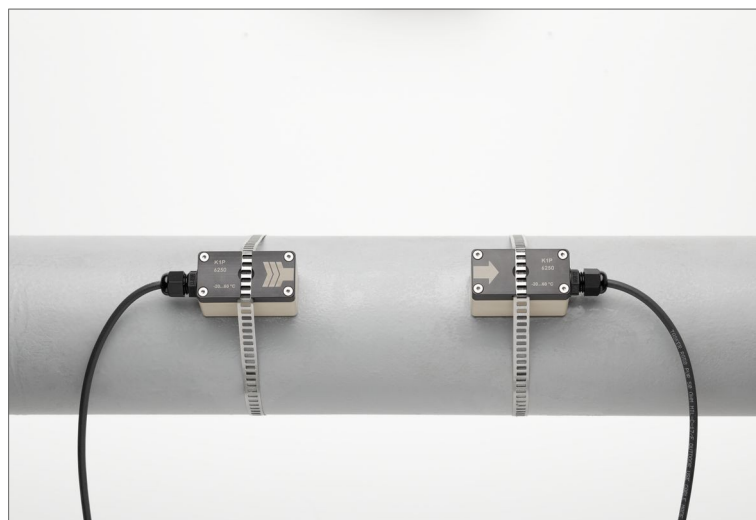

Picture 8: Correct positioning of the sensors

3.7.3 Sensor mounting with tension straps



- Cut the tension straps to the appropriate length.
- Pull at least 2 cm of the tension strap through the slot in the clamp and bend the strap back to secure the clamp to the tension strap.
- Guide the other end of the tension strap through the groove on top of the sensor.
- Place the sensor onto the prepared pipe section.
- Hold the transducer with one hand and guide the tension strap around the pipe.
- Pull the tension strap and guide the free end through the clamp so that the clamp hooks engage. Slightly tighten the screw on the clamp.
- Mount the second sensor in the same way.
- Press the sensors firmly onto the pipe. There should be no air pockets between the transducer surface and the pipe wall.
- Using a measuring tape, adjust the sensor separation distance as suggested by the flowmeter. When the sensor positioning screen (see Section 4.3) is displayed, the middle bar allows fine adjustment of the sensor location.
- Ensure that the narrower side of the clip is above and inside the wider side and that the two sides of the clip do not come into contact while tightening, as this will prevent the strap from being correctly tensioned.

KATflow 100

INSTALLATION




Picture 9: Metallic mounting straps

4 OPERATION

4.1 Switching On/Off

The flowmeter is switched on by connecting the power supply to the instrument. Disconnecting the external supply switches the flowmeter off.

4.2 Keypad and display

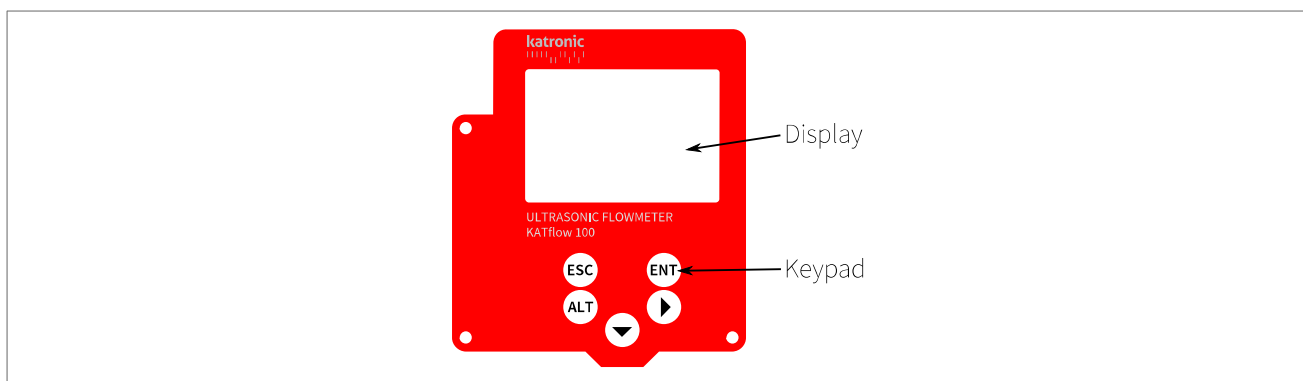



Picture 10: Keypad and display KATflow 100



Customer-specific settings for data to be displayed can be achieved by using the appropriate menu items.

4.2.1 Keypad key functions

| Used keys | Main function | Secondary function |
|---|--|--|
|  | Character position selection for data entry Move RIGHT | In measurement mode: Switches between process value display and diagnostic display Character entry: Position/character selection for data entry In menus: Contrast adjust on main menu (if key currently has no other function) |
|  | Move menu/list selection item DOWN | Move in scrolled lists Character entry: Character entry from scrolled characters In measurement mode: Screen selection |

KATflow 100

OPERATION




| Used keys | Main function | Secondary function |
|---|------------------|--|
|  | Backlight on/off | In menus: Backlight on/off 4 x ALT opens quick access to device functions A code can be used to switch directly to important device functions. Codes: 1: Keypad sound off/on, 2: Language selection, 5: Scope function Character entry: Delete character at current cursor position |
|  | ESCape menu item | Abort entry without saving In measurement mode: Escape measurement mode |
|  | ENTer menu item | Confirm and save entry or move through menu structure In diagnostic and scope display: Switches between measured values of the flow directions (upstream – against flow direction (U) and downstream – in flow direction (D)) Standard is U (Note: The switching function applies to ultrasonic board version 5.0 or higher) |

Table 8: Keypad key functions

4.2.2 Display icons and functions



Picture 11: Display overview

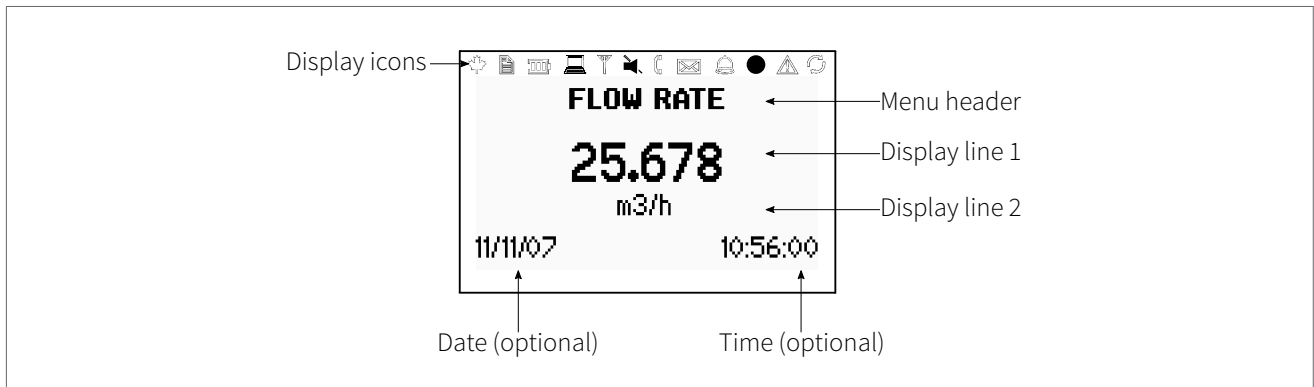




 




| Display icon | Function | |
|---|-----------------------|---|
|  | On Off Flashing | Display of the transmission voltage: 75 V 10 V 150 V |
|  | On Off Flashing | Data logger recording Data logger switched off Data logger full |
|  | | Function not used on KATflow 100 |
|  | On Off | LCD backlight switched on LCD backlight switched off |
|  | On Off | I/O processor error (internal display only) I/O processor works without errors |
|  | On Off | Without strike-through: Speaker on With strike-through: Speaker off |
|  | On Off | Coupling error Sensor operating correctly |
|  | | Function not used on KATflow 100 |
|  | On Off | Key lock activated Key lock deactivated |
|  | On Off | Time/date set (where specified) Clock error |
|  | On Off | Error recorded in error log No error detected |
|  | On Off | Serial communication on (where specified) Serial communication off |
| L, T or LT | | Displays whether flow is L aminar, T urbulent or L aminar- T urbulent |
| Q | On Off | Totaliser for the active channel switched on Totaliser for the active channel switched off |




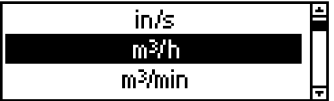
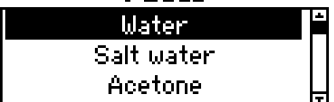
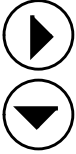

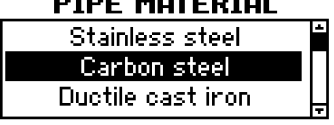
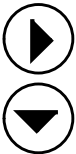


Table 9: Display icon functions

KATflow 100

OPERATION

4.3 Quick Setup Wizard

The Quick Setup Wizard allows for a speedy setup of the most important parameters in order to achieve successful measurements in the shortest possible time:

| Used keys | Display screen | Operation |
|---|---|---|
|  |  | At first power on and the boot sequence, the “Main Menu” is displayed. Use the DOWN ▼ key to select “Quick Start” and confirm by pressing ENTER . |
| |  | Use DOWN ▼ key to select “Setup Wizard”. Confirm by pressing ENTER . If the sensors are recognised, the serial number will be shown. If not, the type can be selected. |
| |  | Select the main measurement unit using the DOWN ▼ and RIGHT ► keys and confirm with ENTER . This unit will be displayed in the middle of the measurement screen. |
| |  | Select the fluid using the DOWN ▼ and RIGHT ► keys. Confirm by pressing ENTER . |
|  |  | Enter the fluid temperature using DOWN ▼ and RIGHT ► keys and confirm with ENTER . Use RIGHT ► key to character position selection for correcting entry errors. |
| |  | Select pipe material using the DOWN ▼ and RIGHT ► keys and confirm with ENTER . |
|  |  | Enter the outer pipe diameter using DOWN ▼ and RIGHT ► keys confirm with ENTER . Use RIGHT ► key to character position selection for correcting entry errors. If 0 is entered and confirmed, an additional screen appears that allows entry of the circumference. Press ALT to delete characters at the current cursor position. |
| |  | Enter the circumference using DOWN ▼ and RIGHT ► keys and confirm with ENTER . |






| Used keys | Display screen | Operation |
|--|--|---|
|   | <p>WALL THICKNESS</p> <p>4.9 mm</p> | <p>Enter pipe wall thickness using DOWN ▼ and RIGHT ► keys and confirm with ENTER. Use RIGHT ► key to character position selection for correcting entry errors.</p> |
| | <p>LINER MATERIAL</p> <p>None Epoxy Rubber</p> | <p>Select pipe liner material using DOWN ▼ and RIGHT ► keys. Confirm by pressing ENTER. If a liner material is chosen, an additional screen appears that allows entry of liner thickness.</p> |
|   | <p>PASSES</p> <p>Auto 1 2</p> | <p>Select number of sound passes (sound paths) using DOWN ▼ and RIGHT ► keys.</p> <p>Auto: Automatically 1: 1 pass (Diagonal Mode) 2: 2 passes (Reflection Mode) 3: 3 passes (Diagonal Mode) 4: 4 passes (Reflection Mode) etc.</p> <p>Confirm with ENTER.</p> |
| | <p>QUICK START</p> <p>Setup Wizard Totaliser Start Measurement Measurement Period</p> | <p>Select “Start Measurement” and confirm with ENTER to start the sensor positioning procedure.</p> |
| | <p>SENSOR</p> <p>Spacing +114.1 mm Passes 4 Signal +47.8 dB</p>  | <p>Sensor positioning screen: Mount transducers with suggested spacing and use middle bar for fine adjustment of position (central position is desired). Observe signal-to-noise (upper bar) and quality (lower bar). These should be of identical length.</p> <p>ALT activates the scope function for further diagnosis. ► switches between different signal diagnostic data.</p> <p>Confirm by pressing ENTER to obtain measurements.</p> <p>Note: Numbers shown are for indication only.</p> |
| | <p>PV T</p> <p>41.36 m³/h</p> <p>05/06/20 13:08:36</p> | <p>Success!</p> |

Table 10: Quick Setup Wizard

KATflow 100

OPERATION

4.4 Measurement

4.4.1 Main process value display

Measurement is started using “Start Measurement” in the Quick Start Wizard. If all parameters have been entered, the next time the flowmeter is switched on the main process value (PV) is immediately shown on the display and/or made available as an output signal (if installed and operating).



The main process value (PV) is the primary measurement data and is usually displayed as the middle unit. User-specific settings for the main process value display can be made using the corresponding options in the menu. The process value can be selected from a list of available values.




| Used keys | Display screen | Operation |
|---|---|---|
|    | <p style="text-align: center;">PV T</p> <p style="text-align: center;">41.36 m³/h</p> <p>05/06/20 13:08:36</p> | <p>The main process value can be changed in the “Quick Start” or “Installation” menus. Press ESC at any time to return to the “Main Menu”.</p> <p>Change to the diagnostic and process value display by pressing RIGHT ▶ and DOWN ▼.</p> |

Table 11: Main process value display

4.4.2 Three-line display



| Used keys | Display screen | Operation |
|--|--|---|
|   | <p style="text-align: center;">PV T</p> <p style="text-align: center;">1.36 m/s 42.08 m³/h 34.74 dB Signal</p> <p>05/06/20 13:12:51</p> | <p>The three-line display screen is configurable to show flow, totalisers and diagnostic functions.</p> <p>Change to diagnostic displays and to totaliser by pressing RIGHT ▶.</p> <p>Cycle through display screens using DOWN ▼.</p> |

Table 12: Main process value display in three-line display format



The sequence of the process value displays is: Main process value display, three-line display, totaliser display.

4.4.3 Totaliser



The totaliser displays will only be shown when the totalisers are activated and a volume flow, mass flow or heat flow is selected as process value (middle line).



| Used keys | Display screen | Operation |
|--|---|--|
|   | <pre> Q PV T Q+ 1.05 m³ 42.55 m³/h Q- 0.00 m³ 05/06/20 13:15:33 </pre> | <p>The flow totaliser can be started or reset by selecting “Totaliser” from the main menu. The totaliser can be viewed on the three-line display as shown, or by selecting a quantity as the middle unit. View the three-line menu by pressing the DOWN ▾ button.</p> |

Table 13: Totaliser display

4.4.4 Diagnostic display



| Used keys | Display screen | Operation |
|---|---|---|
|   | <pre> DIAGNOSTIC 30.3 dB Gain 34.7 dB Signal (U) -7.5 dB Noise 05/06/20 13:17:28 </pre> | <p>Line 1 shows the amplifier gain. Line 2 displays the signal strength. Line 3 indicates the noise. Change to more diagnostic displays by pressing DOWN ▾. Change to process value displays by pressing RIGHT ▶. Refer to Customer Support for the meanings of each diagnostic screen.</p> |

Table 14: Diagnostic display



Diagnostic displays can be viewed directly during measurement. Other diagnostic functions are available in the menu structure.

4.4.5 Data logger

- The data logger is enabled from the “Main Menu” and operates when a non-zero value is entered for the interval.
- Items to be logged are selected from the “Selection” screen. **ENT** selects and deselects items.
- Up to ten items may be selected.
- When “dB Signal” and “dB SNR” are selected, two variables are stored, since one measurement is carried out with the flow direction (D – downstream) and one against the flow direction (U – upstream) (Note: This applies to ultrasonic board version 5.0 or higher).



- If no items are selected the logger will record blank space.
- Send logger by serial port to a terminal program by selecting “Log Download”.
- Clear the logger by selecting “Log Erase”.
- Remaining logger space can be seen in the diagnostic displays.
- “Wrap Mode” saves as a single measurement session which deletes earlier data once the logger is full. When resuming a measurement, it must be confirmed that the data memory will be deleted in this case. If a restart occurs that is not user initiated (for example power failure), the previous measurement session will be continued. Note that KATdata+ software cannot be used with this mode.

KATflow 100

COMMISSIONING

5 COMMISSIONING

5.1 Menu structure

| Main menu | Menu level 1 | Menu level 2 | Description/settings |
|-------------|--------------|----------------------------------|---|
| Quick Start | | | |
| | Setup Wizard | | |
| | | Default Sensor | Indication of sensor type and serial number if automatically detected, otherwise select from list ↓→ <ul style="list-style-type: none"> • K1L, K1N, K1E, K1Ex, K1P • K4L, K4N, K4E, K4Ex • K0L, K0N, M, Q, Special (see “Start Measurement” below) |
| | | Middle Units (Main Displayed) | Select from list where available ↓→ <ul style="list-style-type: none"> • Off (disable channel) • m/s, ft/s, in/s (flow velocity) • m/s, ft/s, in/s, m³/h, m³/min, m³/s, l/h, l/min, l/s USgal/h, USgal/min, USgal/s, bbl/d, bl/h, bbl/min (volume flow) • g/s, t/h, kg/h, kg/min (mass flow) • m³, l, USgal, bbl (volume, totaliser volume flow) • g, t, kg (mass, totaliser mass flow) • W, kW, MW (heat flow, HQM) • J, kJ, MJ (heat, totaliser heat flow) Diagnostic data: <ul style="list-style-type: none"> • dB Signal (signal), dB Noise (noise), db SNR (signal-to-noise ratio) • m/s c (speed of sound), CU (housing temperature) • K(correction factor), Re (Reynolds number) • V (battery voltage) • SOS (calculated speed of sound), Density, Kin. Vis. (kinematic viscosity), Dyn. Vis. (dynamic viscosity), SHC (specific heat capacity from inputs/calculation) • TEMP (specified or measured fluid temperature) • Press. (specified or measured fluid pressure) • T in, T out (inlet and outlet temperature) • V Sensor (sensor voltage) • Other (assignable input or calculated value) |
| | | Fluid | Select from list ↓→ <ul style="list-style-type: none"> • Water, Salt water, Acetone, Alcohol, Ammonia Carbon Tet (carbon tetrachloride), Ethanol, Ethyl alcohol, Ethyl ether, Ethylene glycol, Glycol/water 50 %, Kerosene, Methanol, Methyl alcohol, Milk, Naphtha, Car oil, Refrigerant R134a, Refrigerant R22, Hydrochloric acid, Sour cream, Sulphuric acid, Toluene, Vinyl chloride, • User (kinematic viscosity, density, medium sound speed) |
| | | Kinematic Viscosity | (Only if user fluid selected) 0.001 ... 30 000 mm ² /s |
| | | Density | (Only if user fluid selected) 100 ... 2 000 kg/m ³ |
| | | Medium Sound Speed | (Only if user fluid selected) 100 ... 3 500 m/s |
| | | Temperature | -30 ... +300 °C |

| Main menu | Menu level 1 | Menu level 2 | Description/settings |
|-----------|-------------------|---------------------------|---|
| | | Pipe Material | Select from list ↓→ <ul style="list-style-type: none"> • Stainless steel, Carbon steel, Ductile cast iron, Grey cast iron, Copper, Lead, PVC, PP, PE, ABS, Glass, Cement • User (pipe sound speed) |
| | | Pipe Sound Speed | (Only if user pipe material selected) 600 ... 5 000 m/s |
| | | Outside Diameter | 6 ... 6 500 mm |
| | | Circumference | (Only if 0.0 is selected for outer diameter) 18.8 ... 20 420.4 mm |
| | | Wall Thickness | 0,5 ... 80 mm |
| | | Liner Material | Select from list ↓→ <ul style="list-style-type: none"> • None • Epoxy, Rubber, PVDF, PP, Glass, Cement • User (liner sound speed) |
| | | Liner Thickness | (Only if lining material selected) 500 ... 5 000 m/s |
| | | Liner Sound Speed | (Only if lining material selected) 1.0 ... 99.0 mm |
| | | Passes | Select from list ↓→ Auto, 1 ... 16 |
| | Totaliser | | Off, On Reset+ (positive total) Reset- (negative total) Reset both |
| | Start Measurement | | |
| | | Sensor Type | Indication of sensor type and serial number if automatically detected, otherwise select from list ↓→ (see above) |
| | | SP1 – Sensor Frequency | Only for special, unrecognised sensors |
| | | SP2 – Wedge Angle | Only for special, unrecognised sensors |
| | | SP3 – Wedge Sound Speed 1 | Only for special, unrecognised sensors |
| | | SP4 – Wedge Sound Speed 2 | Only for special, unrecognised sensors |
| | | SP5 – Crystal Offset | Only for special, unrecognised sensors |
| | | SP6 – Spacing Offset | Only for special, unrecognised sensors |
| | | SP7 – Zero Flow Offset | Only for special, unrecognised sensors |
| | | SP8 – Upstream Offset | Only for special, unrecognised sensors |

KATflow 100

COMMISSIONING

| Main menu | Menu level 1 | Menu level 2 | Description/settings |
|--------------|--------------------|------------------------|---|
| | | Sensor K-Factor | Only for special, unrecognised sensors |
| | Measurement Period | | Selection of the waiting time between two measurements: 1 ... 3 600 s Note: If the Saver Mode is activated, the measurement period changes automatically from seconds to minutes. |
| Installation | | | |
| | Pipe | | |
| | | Material | Select from pipe material list ↓→ |
| | | Outside Diameter | 6 ... 6 500 mm (outside diameter) |
| | | Wall Thickness | 0.5 ... 80 mm (wall thickness) |
| | | Transv. Sound Velocity | (Transverse sound velocity) 600 ... 6 553,5 m/s |
| | | Long. Sound Velocity | (Longitudinal sound velocity) 600 ... 8 000 m/s |
| | | Circumference | 18.8 ... 20 420 mm (pipe circumference) |
| | | Roughness | 0 ... 10 mm |
| | Medium | | |
| | | Fluid | Select from fluid list ↓→ |
| | | Kinematic Viscosity | 0.001 ... 30 000 mm ² /s |
| | | Dynamic Viscosity | 0 ... 30 000 g/ms |
| | | Density | 100 ... 2 000 kg/m ³ |
| | | Transv. Sound Velocity | (Transverse sound velocity) 100 ... 3 500 m/s |
| | | Temperature | -30 ... +300 °C |
| | Lining | | |
| | | Material | Select from material list ↓→ |
| | | Thickness | 0.1 ... 99.9 mm |
| | | Transv. Sound Velocity | (Transverse sound velocity) 600 ... 6 553 m/s |
| | Passes | | Select from list ↓→ |
| Display | | | |
| | | Top Line | Select units from list ↓→ |
| | | Middle Line | Select units from list ↓→ |
| | | Bottom Line | Select units from list ↓→ |
| | | Damping | Reduces fluctuations in the display output 1 ... 255 s |
| | | Metric/Imp. | Use metric or imperial units for entered data |

| Main menu | Menu level 1 | Menu level 2 | Description/settings |
|--------------------|---------------|-----------------|---|
| | | Auto Seq. Timer | Set automatic change of display 0 ... 60 measurements (0 deactivates automatic change of display) |
| Inputs/ Outputs | | | Lists available input/output slots Possible configurable settings below [where specified] |
| | I Out | | Analogue current output (active or passive) |
| | | Source | Select from list ↓→ Off, Channel 1, Test |
| | | Units | Select from list ↓→ |
| | | Min. Value | Min. process variable (PV) value that corresponds to 0 mA (only active) or 4 mA -10 000 ... 10 000 |
| | | Max. Value | Max. process variable (PV) value that corresponds to 20 mA |
| | | Damping | Additional smoothing of the current output, the higher the damping factor: 1 ... 255 measurements |
| | | Span | (Only active current output) 0 ... 20 mA or 4 ... 20 mA |
| | | Error | Defines output behaviour in the event of error Select from list ↓→ <ul style="list-style-type: none"> • Hold (hold last value, select hold time) • 3.8 mA • 21.0 mA |
| | Voltage Out | | Analogue voltage output |
| | | Source | Select from list ↓→ Off, Channel 1, Test |
| | | Units | Select from list ↓→ |
| | | Min. Value | Min. process variable (PV) value that corresponds to 0 V -10 000 ... 10 000 |
| | | Max. Value | Max. process variable (PV) value that corresponds to 10 V -10 000 ... 30 000 |
| | | Damping | Additional smoothing of the current output, the higher the damping factor: 1 ... 255 measurements |
| | | Error | Defines output behaviour in the event of error Select from list ↓→ |
| | Frequency Out | | Analogue frequency output |
| | | Source | Select from list ↓→ Off, Channel 1, Test |
| | | Units | Select from list ↓→ |
| | | Min. Value | Min. process variable (PV) value that corresponds to minimum frequency: -10 000 ... 10 000 |
| | | Max. Value | Max. process variable (PV) value that corresponds to maximum frequency: -10 000 ... 30 000 |

KATflow 100

COMMISSIONING

| Main menu | Menu level 1 | Menu level 2 | Description/settings |
|-----------|---------------|--------------|---|
| | | Damping | Additional smoothing of the current output, the higher the damping factor: 1 ... 255 measurements |
| | Pulse Out | | Digital open-collector output |
| | | Source | Select from list ↓→ Off, Channel 1, Test |
| | | Units | Select from list ↓→ |
| | | Mode | Select from list ↓→ Alarm: PV alarm switch <ul style="list-style-type: none"> On Point – Value of the process variable (PV) at which the relay switches to alarm mode: -10 000 ... 10 000 Off Point – Value of the process variable (PV) at which the relay interrupts the alarm mode again: -10 000 ... 10 000 Pulse: Sum value of the selected process variable (PV) for which a pulse signal is generated, e. g. PV [m ³], pulse value = 10, a pulse is generated every 10 m ³ <ul style="list-style-type: none"> Amount of the selected unit: 0.00 ... 1 000 000 (total of the selected unit) Width: Duration of the pulse 10 ... 999 ms Source (Grand, Positive, Negative) Linear: Calculated maximum number of pulses per second, i. e. the maximum pulse rate in Hz <ul style="list-style-type: none"> Min. Value: -10 000 ... 10 000 Max. Value: -10 000 ... 30 000 Damping: 1 ... 255 measurements |
| | Relay Out | | Digital relay output |
| | | Source | Select from list ↓→ Off, Channel 1, Test |
| | | Units | Select from list ↓→ |
| | | Mode | Select from list ↓→ Alarm: <ul style="list-style-type: none"> On Point – Value of the process variable (PV) at which the relay switches to alarm mode: -10 000 ... 10 000 Off Point – Value of the process variable (PV) at which the relay interrupts the alarm mode again: -10 000 ... 10 000 Pulse: <ul style="list-style-type: none"> Amount of the selected unit: 0.00 ... 1 000 000 (total of the selected unit) Width (in ms): 10 ... 999 ms Linear: <ul style="list-style-type: none"> Min. Value: -10 000 ... 10 000 Max. Value: -10 000 ... 30 000 Damping: 1 ... 255 measurements |
| | Pt 100 4 Wire | | Temperature input |
| | | Source | Select from list ↓→ Off, Channel 1, Test |

| Main menu | Menu level 1 | Menu level 2 | Description/settings |
|-----------|---------------|------------------|---|
| | | Type | Select from list ↓→ <ul style="list-style-type: none"> User – Input of a temperature value defined by the user within the range -200 ... +600 °C Pt 100 – Temperature (in °C) determined and read in by a probe (Pt 100) |
| | | In-Out | Select from list ↓→ <ul style="list-style-type: none"> Inlet – Inlet temperature for HQM measurement Outlet – Outlet temperature for HQM measurement Compensation – Temperature for temperature compensated measurements |
| | | Value | (Only if user selected) Input of a temperature value defined by the user within the range -200 ... +600 °C |
| | | Offset | Input of a user-defined offset within the range -100 ... +100 °C |
| | Current In | | Analogue current input (passive or active) |
| | | Source (Channel) | Select from list ↓→ Off, Channel 1, Test |
| | | Source (Value) | Select from list ↓→ Density, Kin. Viscosity, Dyn. Viscosity, Temperature, Pressure, Other |
| | | Min. Value | Minimum value of the variable input parameters: -10 000 ... 10 000 |
| | | Max. Value | Maximum value of the variable input parameters: -10 000 ... 30 000 |
| | | Span | (Only passive current input) 0 ... 20 mA or 4 ... 20 mA |
| | Modbus RTU | | [where specified] |
| | Modbus TCP/IP | | [where specified] |
| | HART | | (HART® compatible output, where specified, only for HART® software version 3.0.0 or higher) HART® is a registered trademark of the HART® Communication Foundation |
| | | Source | Select from list ↓→ Off, Channel 1, Test |
| | | Units | Select and assign units (ENTER selects, 0 cancels selection, ESC exits menu) ↓→ <ul style="list-style-type: none"> P – Primary Value PV S – Secondary Value SV (optional) T – Third Value TV (optional) F – Fourth Value FV or QV (optional) |
| | | Min. Value | Minimum value of the primary process variable (PV) corresponding to a current of 4 mA: -10 000 ... 10 000 |
| | | Max. Value | Maximum value of the primary process variable (PV) corresponding to a current of 20 mA: -10 000 ... 30 000 |

KATflow 100

COMMISSIONING

| Main menu | Menu level 1 | Menu level 2 | Description/settings |
|-----------|--------------------|---------------------|---|
| | M-Bus | | |
| | | Address | Primary address input is immediately after selecting “WIRES M-BUS” in the inputs/outputs menu Enter the primary address of the encoder: 1 ... 250 |
| | | Baud Rate | Selection of the baud rate ↓→ 300, 600, 1 200, 2 400, 4 800, 9 600, 19 200, 38 400 baud |
| | Other In/Out types | | Refer to Technical Support |
| System | | | |
| | Instrument Info | | |
| | | Model Code | KATflow 100 |
| | | Serial No. | (Serial number) Example: 10000907 |
| | | HW Revision | Example: 3.00, 1.70 |
| | | SW Revision | Example: 6.04.09.0, 5.0 KAT |
| | Calculation | | |
| | | Low Flow Cut-Off | ± Low flow velocity cut-off: 0 ... 1 m/s |
| | | High Flow Cut-Off | ± Maximum flow velocity cut-off: 0 ... 30 m/s |
| | | Corrected | Apply flow velocity profile correction: Yes/No |
| | | PV Offset | Calibration process variable zero offset: -30 ... +30 m/s |
| | | PV Scaling | Calibration process variable gradient scaling: -10.0 ... +10.0 m/s |
| | | Zero Calibration | Zero calibration settings Adjust: <ul style="list-style-type: none"> Zero (Yes/No): Sets current flow as zero (Perform auto Zero calibration) Track (Yes/No): Zero follows output variations Delta time: Zero flow offset in ns (Zero flow delta time offset in ns, read from sensor PROM or entered directly for special sensors) Time Up: Transit time offset in µs, for delays in special sensors, thermal buffers and cable extensions |
| | | Heat Capacity | Specify heat capacity of the medium |
| | | Missed Measurements | <ul style="list-style-type: none"> Setting for the behaviour of the output values when too many unsuccessful measurements occur: Hold Value: Output value of the last successful measurement Go to Zero: Output value becomes 0 User Value: User-specific error value: -1 ... 300 000 m/s |
| | User | | |
| | | Identifier | Example: Pump P3A (9 character string possible) |
| | | Tag No. | (Tag number) Example: 1FT-3011 (9 character string possible) |
| | Test | | |

| Main menu | Menu level 1 | Menu level 2 | Description/settings |
|-------------|------------------|-----------------------|--|
| | | Installation | Control system simulation 60 second ramping up of flow velocity in m/s from 0 to programmed High Flow Cut-Off and subsequent 60 second ramping down All configured outputs will exhibit their programmed behaviour Test Mode: Yes/No |
| | | Display | Display screen test routine |
| | | Keypad | Keypad test routine |
| | | Memory | Memory test routine Memory erase: Yes/No |
| | | Peripherals | Unit temperature, time, date, clock |
| | | Ultrasonics | Tests ultrasonic board and sensors |
| | | Calibration Pt 100 | Tests measured temperature and resistance |
| | | Reset Pt 100s | Resets temperature inputs |
| | Settings | | |
| | | Date | Example: 16/10/2020 |
| | | Time | Example: 09:27:00 |
| | | Date Format | Select from list ↓→ <ul style="list-style-type: none"> • dd/mm/yy • mm/dd/yy • yy/mm/dd |
| | | Language | Select from list (as available) ↓→ English, German, French, Spanish, Russian |
| | | Keypad | Enable keypad sound: Yes/No |
| | Timer Mode | | Device starts measurement for the set measuring period <ul style="list-style-type: none"> • Activate Timer Mode: Yes/No • Input: Start Time • Input: End Time Note: Measurement does not start automatically The programmed measurement must be activated once via “Start Measurement” Device confirms the set time interval |
| | Load Defaults | | Load default settings (except date and time): Yes/No |
| | Measurement Mode | | Selection of the measuring method: <ul style="list-style-type: none"> • Normal: Standard measuring mode • Doppler: Doppler measurement mode • Auto: Automatic selection of standard or Doppler measurement mode • Fast: Fast mode (Measuring mode with the smallest possible measuring cycle time. No indication of the measured value on the display. Output via serial interface and/or by storing the measured values in the internal data logger) |
| Diagnostics | | | |
| | | | Shows measured temperature, available logger memory (Cycle using ENTER) |
| Data Logger | | | |

KATflow 100


COMMISSIONING

| Main menu | Menu level 1 | Menu level 2 | Description/settings |
|--------------------------------|--------------|--------------|--|
| | | Interval | Enter logging interval in seconds: 0 ... 3 600 s |
| | | Selection | Select from list ↓→ ENTER selects and deselects Up to ten variables may be logged Note: When “dB Signal” and “dB SNR” are selected, two variables are stored in each case, since one measurement is performed with the flow direction (D – downstream) and one against the flow direction (U – upstream) (This applies to ultrasonic board version 5.0 or higher). |
| | | Low Memory | Warning output 4 ... 100 % |
| | | Log Wrap | Yes/No Output of selected values as continuous data streams with header Note: Only one measurement session can be recorded in this mode |
| | | Log Download | Sends all logger data using serial port |
| | | Log Erase | Clears the logger |
| Serial Com- muni- cation | | | |
| | | Mode | Select from list ↓→ <ul style="list-style-type: none"> • None • Printer (output every second of selected values) • Diagnostic • Download (send logger data using serial port) • Calibration Test (laboratory calibration, not recommended for field or customer use) |
| | | Baud | Select from list ↓→ <ul style="list-style-type: none"> • 9 600 (default) • 19 200 • 57 600 • 115 200 |
| | | Parity | Select from list ↓→ <ul style="list-style-type: none"> • None • Even (default) • Odd |
| | | Type | Select from list ↓→ RS 232 etc. (as installed) |
| Scope | | | Scope function can be accessed in the sensor positioning screen by pressing ALT or in Direct Access by entering code 5 |
| | | | Shows the received acoustic pulse and further data to evaluate the signal quality as a scope function (upstream and downstream) (see Section 5.7) <ul style="list-style-type: none"> • Exit screen: ESC • Sampling window +6 μs: UP • Sampling window -6 μs: RIGHT • Switching the display flow direction: ENTER |

Table 15: Menu structure KATflow 100

5.2 Output configuration

The assignment of slots is detected by the flowmeter, and will be as shown in the “Inputs/Outputs” menu. The following picture shows an example assignment with a passive current input on slot 1 (line 1) and an active current output on slot 2 (line 2).

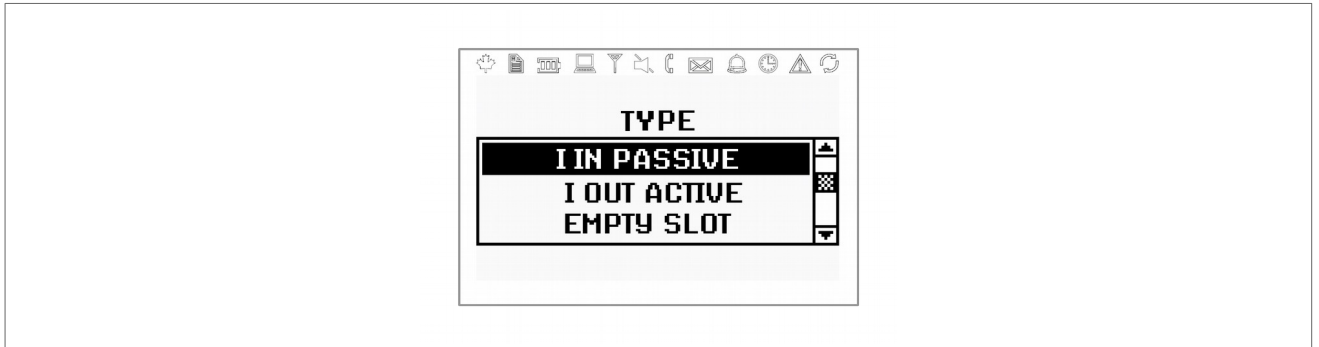

Picture 12: Display example passive current input

5.2.1 Serial interface

The RS 232 serial interface can be used to transmit data online, to download the integral data logger content or to communicate with peripheral equipment. The settings can be found in the “Serial Communication” submenu.

5.2.2 Modbus RTU

The interface is used for networking up to 32 flowmeters to a centralised computer system. Each flowmeter is given an unique address to be able to communicate effectively. The communication protocol used conforms to the conventions of the Modbus RTU protocol, a description of which is given in a separate document. Please refer to Customer Support for further information.

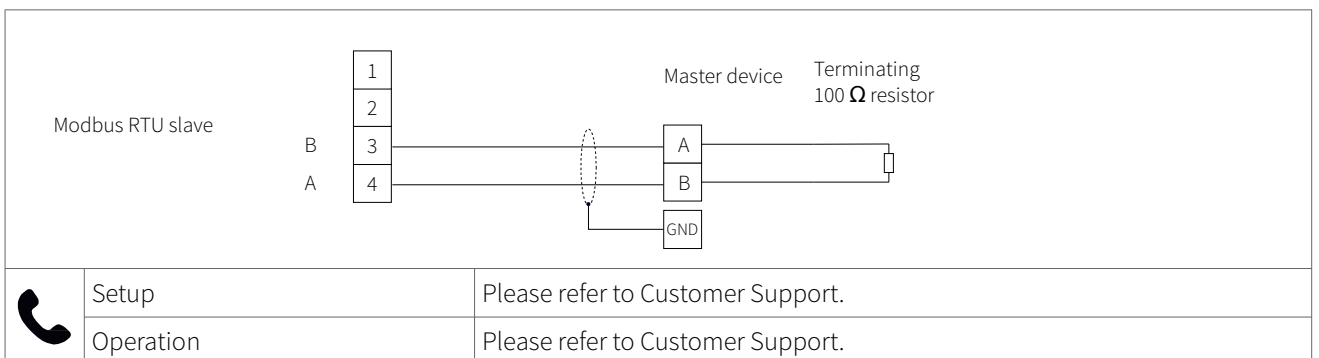


Table 16: Wiring Modbus RTU

KATflow 100

COMMISSIONING

5.2.3 HART® compatible output

The KATflow 100 can also be configured with an optional module which responds to output commands conforming to the HART® protocol. Please refer to Customer Support for further information.

HART® is a registered trademark of the HART Communication Foundation.

| | | |
|----------------------------|--|-----------------------------------|
| | | |
| Electrical characteristics | <ul style="list-style-type: none"> Galvanically isolated from main electronics and from other inputs and outputs 4 process variables selectable (PV, SV, TV and FV) Analogue: 4 ... 20 mA passive, $R_{Load} = 220 \Omega$, $U = 24 V$, accuracy: 0.1 % of measured value | |
| | Setup | Please refer to Customer Support. |
| | Operation | Please refer to Customer Support. |

Table 17: Wiring HART® compatible output

5.2.4 Analogue current output 0/4 ... 20 mA

The analogue current outputs operate in a 4 ... 20 mA (active or passive) or 0 ... 20 mA (active) span.

Current outputs may be assigned to process values in the “Mode” section of the output menu. The outputs can be programmed and scaled within the menu structure.

| | | |
|-----------------------------------|--|-----------------------------|
| Passive current output (optional) | | 4 ... 20 mA, load < 500 Ω |
| Active current output (optional) | | 0/4 ... 20 mA, load < 500 Ω |
| Electrical characteristics | <ul style="list-style-type: none"> 0/4 ... 20 mA active and 4 ... 20 mA passive options Galvanically isolated from main electronics and from other inputs and outputs Active: $U = 30 V$, $R_{Load} < 500 \Omega$, 16 bit resolution, accuracy: 0.1 % of measured value Passive: $U = 9 \dots 30 V$, $R_{Load} < 500 \Omega$, 16 bit resolution, accuracy: 0.1 % of measured value | |

Table 18: Wiring analogue current output 0/4 ... 20 mA

5.2.5 Analogue voltage output 0 ... 10 V

Voltage outputs may be assigned to process values in the “Mode” section of the output menu. The outputs can be programmed and scaled within the menu structure.

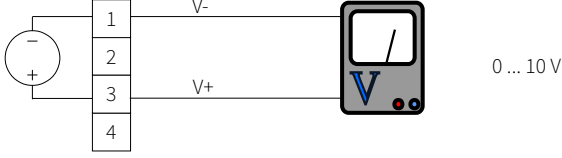
| | |
|----------------------------|--|
| Voltage output (optional) |  |
| Electrical characteristics | <ul style="list-style-type: none"> Galvanically isolated from main electronics and from other inputs and outputs Range: 0 ... 10 V $R_{Load} = 1\text{ k}\Omega$, $C_{Load} = 200\text{ pF}$ Resolution: 16 bit, accuracy: 0.1 % of measured value |

Table 19: Wiring analogue voltage output 0 ... 10 V

5.2.6 Analogue frequency output (passive)

Frequency outputs may be assigned to process values in the “Mode” section of the output menu. The outputs can be programmed and scaled within the menu structure.


| | |
|--|--|
| Frequency (analogue output) (optional) |  |
| Electrical characteristics | <ul style="list-style-type: none"> Galvanically isolated from main electronics and from other inputs and outputs 2 Hz ... 10 kHz $U = 24\text{ V}$, $I_{max} = 4\text{ mA}$ |

Table 20: Wiring analogue frequency output (passive)

5.2.7 Digital open-collector output

Open-collector outputs may be assigned to process values in the “Mode” section of the output menu. The outputs are configured using the menu structure.

The totaliser function is enabled and controlled using the menu structure.

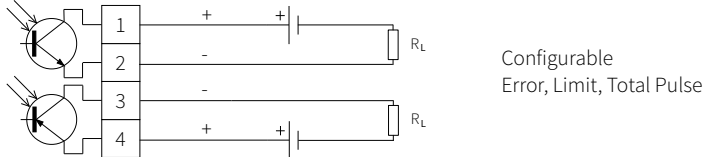
| | |
|--|---|
| Digital output "Open-Collector" (optional) |  |
| Electrical characteristics | <ul style="list-style-type: none"> Galvanically isolated from main electronics and from other inputs and outputs Function: Error, Limit Alarm or Totaliser Totaliser value: 0.01 ... 1 000/unit Width: 1 ... 990 ms $U = 24\text{ V}$, $I_{max} = 4\text{ mA}$ Normally-open and normally-closed switches |

Table 21: Wiring digital open-collector output

KATflow 100

COMMISSIONING

5.2.8 Digital relay output

Relay outputs may be assigned to process values in the “Mode” section of the output menu. The relay outputs are configured using the menu structure.

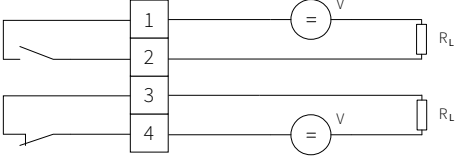
| | | |
|------------------------------------|--|---|
| Digital relay output (optional) |  | Configurable Error, Limit, Total Pulse |
| Electrical characteristics | <ul style="list-style-type: none"> • Galvanically isolated from main electronics and from other inputs and outputs • Function: Error, Limit Alarm or Totaliser • Totaliser value: 0.01 ... 1 000/unit • Width: 1 ... 990 ms • $U = 48\text{ V}$, $I_{\text{max}} = 250\text{ mA}$ • Normally-open and normally-closed contacts | |

Table 22: Wiring digital relay output

5.3 Input configuration

5.3.1 Pt 100 inputs

| | | |
|---|--|----------------------------------|
| <p>Temperature input Pt 100 4-wire (optional)</p> | <p>-FEED 1 -R 2 +R 3 +FEED 4</p> | <p>Pt 100 temperature sensor</p> |
| <p>Electrical characteristics</p> | <ul style="list-style-type: none"> • Pt 100 four-wire circuit • Galvanically isolated from main electronics and from other inputs and outputs • Measurement range: -50 ... +400 °C (-58 ... +752 °F) • Resolution: 0.01 K, accuracy: ±0.02 K | |

Table 23: Wiring Pt 100 inputs

5.3.2 Analogue current input 0/4 ... 20 mA

| | | |
|--|---|------------------------------------|
| <p>Passive analogue input (optional)</p> | <p>- 1 I_{in} 2 I_{in} 3 30 V 4</p> | <p>4 ... 20 mA, passive input</p> |
| <p>Active analogue input (optional)</p> | <p>- 1 I_{in} 2 I_{in} 3 30 V 4</p> | <p>0/4 ... 20 mA, active input</p> |
| <p>Electrical characteristics</p> | <ul style="list-style-type: none"> • 0/4 ... 20 mA active or 4 ... 20 mA passive • $U = 30\text{ V}$, $R_i = 50\ \Omega$, accuracy: 0.1 % of measured value | |

Table 24: Wiring analogue current input 0/4 ... 20 mA

KATflow 100

COMMISSIONING

5.4 Temperature compensation

With temperature compensation enabled the temperature dependency of the medium in relation to speed of sound, viscosity and density calculations will be compensated. The “Inputs/Outputs” menu will then allow the user to select the temperature input source, either Pt 100 temperature sensors or via a 0/4 ... 20 mA input channel.

5.5 Heat quantity measurement

Where equipped, heat quantity (energy) and heat flow (energy flow) can be measured. If a heat quantity unit is specified for the process value, the KATflow 100 will ask the user for the specific heat capacity of the medium in J/(g*K) (for example 4.186 J/(g*K) for water).

The output options menu for the Pt 100 will allow the user to select the temperature input source; either Pt 100 temperature sensors or a fixed value for measurement against a known inlet or outlet temperature. Where Pt 100 sensors are selected, the Wizard will prompt the user for a temperature offset, which may be useful where the temperature of the medium differs from the temperature of the pipe wall (for example with unlagged pipes). If a fixed value is selected, the user will be asked to specify this value.


When heat quantity units are selected, these behave as any other process value and may be totalised, logged, or applied to a process output.

5.6 Sound velocity measurement

The measured speed of sound (SOS) is available as a diagnostic function during measurement and may be applied to a process output by selecting “c” from the appropriate output menu.

5.7 Scope function

Katronic flowmeters have an additional scope function which shows a representation of the pulse received by the sensors on channel 1. For each active channel the measuring direction (with or against the flow direction) can be selected. The measuring direction can be switched with **ENTER** and is indicated by an abbreviation (e. g. 1U = channel 1, upstream) at the top right of the graph. In addition to displaying the received pulse, this screen lists the data given from top to bottom (see Picture 13).

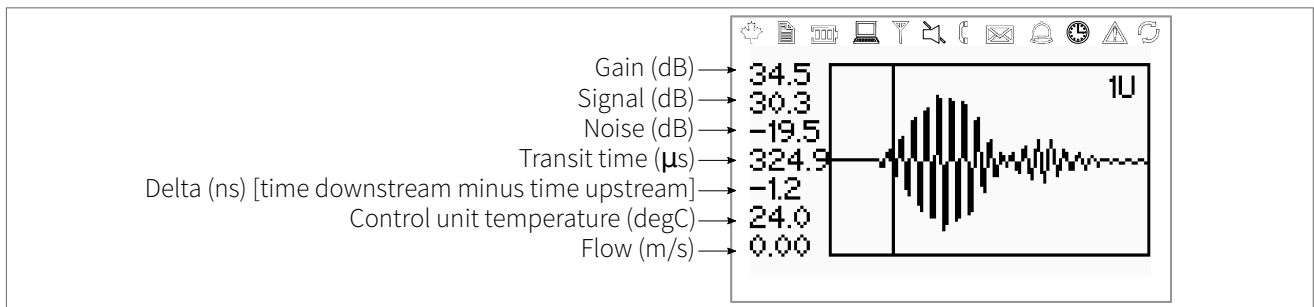

Picture 13: Scope function display

5.8 KATdata+ software

Software can be provided for downloading the contents of the data logger and communication with the flowmeter.

6 MAINTENANCE

KATflow flowmeters are maintenance free concerning the flow measurement functions. Within the scope of periodic inspections, regular inspection for signs of damage or corrosion is recommended for the transducers, the junction box (if installed) and the flowmeter housing.

6.1 Service/Repair

KATflow flowmeters have been carefully manufactured and tested. If installed and operated in accordance with the operating instructions, no problems are usually experienced.

Should you nevertheless need to return a device for inspection or repair, please pay attention to the following points:



- Due to statutory regulations on environmental protection and safeguarding the health and safety of our personnel, the manufacturer may only handle, test and repair returned devices that have been in contact with products without risk to personnel and environment.
- This means that the manufacturer can only service this device if it is accompanied by a Customer Return Note (CRN) confirming that the device is safe to handle.

If the device has been operated with toxic, caustic, flammable or water-endangering products, you are kindly requested:



- To check and ensure, if necessary by rinsing or neutralising, that all cavities are free from such dangerous substances,
- to enclose a certificate with the device confirming that is safe to handle and stating the product used.

KATflow 100

TROUBLESHOOTING

7 TROUBLESHOOTING

7.1 Measurement difficulties and error messages

Most problems with measurement are due to poor signal strength or quality. Initial checks should include:

- Has sufficient acoustic coupling paste been applied?
- Can the number of sound passes be changed? As a general rule, more passes will improve accuracy, fewer passes will give better signal strength.
- Are there any nearby sources of noise or disturbance?
- Can the signal be improved by moving the sensors around the circumference of the pipe?
- Are the application parameters correct?

Should there be the need to call Customer Service, please let us know the following details:



- Model code,
- Serial number,
- SW, HW revision,
- Error log list.

Possible error messages may include the following:

| Error message | Group | Description | Error handling |
|---|--------------------|---|---|
| ULTRASONIC FAIL CYCLE POWER | Hardware | Internal ultrasonic board communication error at power up | Power off/on, otherwise call Customer Support |
| NO SERIAL NUMBER CYCLE POWER | Hardware | Failed to read from system memory | Power off/on, otherwise call Customer Support |
| NO VERSION NUMBER CYCLE POWER | Hardware | Failed to read the ultrasonic board's version number | Power off/on, otherwise call Customer Support |
| PARAMETER XX READ ERROR | Hardware | Failed to read from system memory | Load defaults, otherwise call Customer Support |
| PARAMETER XX WRITE ERROR | Hardware | Failed to write to system memory | Call Customer Support |
| MEASUREMENT STOPPED REASON: COM ERRORS RESTARTING | Hardware | Too many internal ultrasonic board communication errors | Call Customer Support |
| LOADING FAILED | Hardware | Failed to read a stored setup from system memory | Call Customer Support |
| MENU ERROR | Hardware, Software | Failed to load a menu | Call Customer Support |
| PLEASE LOAD KF-TABLES DATA VERSION X.X.X XXX | Software | The external system memory is empty or an incompatible dataset was detected | Power off/on, otherwise call Customer Support |
| TRANSLATION FAILED | Hardware, Software | Failed to load the chosen language from the system memory | Call Customer Support |
| BAD SENSOR COUPLING | Application | Weak sensor coupling, low SNR | Recouple sensors, check installation, reduce number of passes, look for other location, then have a cup of tea and call Customer Support! |

Table 25: Error list

For all other error messages, please turn off and restart the flowmeter and if messages continue call Customer Support.

KATflow 100

TROUBLESHOOTING

7.2 Data download difficulties

If difficulties are encountered downloading the logger data:

- Check that the flowmeter is switched on and not in measurement mode.
- Check that the same number COM port is allocated in the “Device Manager” (or equivalent) as is set in the KATdata+ software.
- Check that the settings (baud, parity, word length, stop bits) are identical.
- Use the supplied connectors – whether connecting to a 9-pin COM port or converting from serial communication to a Universal Serial Bus (USB).

8 TECHNICAL DATA

8.1 Sound speed of selected pipe materials

| Material | Sound speed* shear wave (at +25 °C) | |
|------------------------------|-------------------------------------|--------|
| | m/s | ft/s |
| Steel, 1 % Carbon, hardened | 3 150 | 10 335 |
| Carbon steel | 3 230 | 10 598 |
| Mild steel | 3 235 | 10 614 |
| Steel, 1 % Carbon | 3 220 | 10 565 |
| 302 Stainless steel | 3 120 | 10 236 |
| 303 Stainless steel | 3 120 | 10 236 |
| 304 Stainless steel | 3 141 | 10 306 |
| 304L Stainless steel | 3 070 | 10 073 |
| 316 Stainless steel | 3 272 | 10 735 |
| 347 Stainless steel | 3 095 | 10 512 |
| “Duplex” stainless steel | 2 791 | 9 479 |
| Aluminium | 3 100 | 10 171 |
| Aluminium (rolled) | 3 040 | 9 974 |
| Copper | 2 260 | 7 415 |
| Copper (annealed) | 2 325 | 7 628 |
| Copper (rolled) | 2 270 | 7 448 |
| CuNi (70 % Cu 30 % Ni) | 2 540 | 8 334 |
| CuNi (90 % Cu 10 % Ni) | 2 060 | 6 759 |
| Brass (Naval) | 2 120 | 6 923 |
| Gold (hard-drawn) | 1 200 | 3 937 |
| Inconel | 3 020 | 9 909 |
| Iron (electrolytic) | 3 240 | 10 630 |
| Iron (Armco) | 3 240 | 10 630 |
| Ductile iron | 3 000 | 9 843 |
| Cast iron | 2 500 | 8 203 |
| Monel | 2 720 | 8 924 |
| Nickel | 2 960 | 9 712 |
| Tin (rolled) | 1 670 | 5 479 |
| Titanium | 3 125 | 10 253 |
| Tungsten (annealed) | 2 890 | 9 482 |
| Tungsten (drawn) | 2 640 | 8 661 |
| Tungsten carbide | 3 980 | 13 058 |
| Zinc (rolled) | 2 440 | 8 005 |
| Glass (pyrex) | 3 280 | 10 761 |
| Glass (heavy silicate flint) | 2 380 | 7 808 |
| Glass (light borate crown) | 2 840 | 9 318 |
| Nylon | 1 150 | 3 772 |
| Nylon, 6-6 | 1 070 | 3 510 |
| Polyethylene (LD) | 540 | 1 772 |
| PVC, CPVC | 1 060 | 3 477 |
| Acrylic resin | 1 430 | 4 690 |
| PTFE | 2 200 | 7 218 |

Table 26: Technical data pipe material

*Note these values are to be considered nominal. Solids may be inhomogeneous and anisotropic. Actual values depend on exact composition, temperature, and to a lesser extent, on pressure and stress.

KATflow 100

TECHNICAL DATA

8.2 Technical data of selected fluids

| All data given at +25 °C (+77 °F) unless otherwise stated | | | | Sound speed | | Change of sound speed per °C | | Viscosity (kinematic) | | | |
|--|---|---------------------------------|---------|---------------------|----------------------|--|-------|-----------------------------------|--------|--|--------|
| Substance | Chemical formula | Density g · cm ⁻³ | | m · s ⁻¹ | ft · s ⁻¹ | m · s ⁻¹ · °C ⁻¹ | | mm ² · s ⁻¹ | | 10 ⁻⁶ · ft ² · s ⁻¹ | |
| Acetic acid, anhydride | (CH ₃ CO) ₂ O | 1.082 | 20 °C | 1 180.0 | 3 871.4 | | 2.50 | 0.769 | | 8.274 | |
| Acetic acid, nitrile | C ₂ H ₃ N | 0.783 | | 1 290.0 | 4 232.3 | | 4.10 | 0.441 | | 4.745 | |
| Acetic acid, ethyl ester | C ₄ H ₈ O ₂ | 0.901 | | 1 085.0 | 3 559.7 | | 4.40 | 0.467 | | 5.025 | |
| Acetic acid, methyl ester | C ₃ H ₆ O ₂ | 0.934 | | 1 211.0 | 3 973.1 | | | 0.407 | | 4.379 | |
| Acetone | C ₃ H ₆ O | 0.791 | | 1 174.0 | 3 851.7 | | 4.50 | 0.399 | | 4.293 | |
| Acetylene dichloride | C ₂ H ₂ Cl ₂ | 1.260 | | 1 015.0 | 3 330.1 | | 3.80 | 0.400 | | 4.304 | |
| Acetylene tetrachloride | C ₂ H ₂ Cl ₄ | 1.595 | | 1 147.0 | 3 763.1 | | 3.80 | 1.156 | 15 °C | 12.440 | 15 °C |
| Alcohol | C ₂ H ₆ O | 0.789 | | 1 207.0 | 3 960.0 | | 4.00 | 1.396 | | 15.020 | |
| Ammonia | NH ₃ | 0.771 | | 1 729.0 | -33 °C 5 672.6 | -27 °C | 6.68 | 0.292 | -33 °C | 3.141 | -27 °F |
| Benzene | C ₆ H ₆ | 0.879 | | 1 306.0 | 4 284.8 | | 4.65 | 0.711 | | 7.650 | |
| Benzol | C ₆ H ₆ | 0.879 | | 1 306.0 | 4 284.8 | | 4.65 | 0.711 | | 7.650 | |
| Bromine | Br ₂ | 2.928 | | 889.0 | 2 916.7 | | 3.00 | 0.323 | | 3.475 | |
| n-Butane (2) | C ₄ H ₁₀ | 0.601 | 0 °C | 1 085.0 | -5 °C 3 559.7 | 23 °C | 5.80 | | | | |
| 2-Butanol | C ₄ H ₁₀ O | 0.810 | | 1 240.0 | 4 068.2 | | 3.30 | 3.239 | | 34.851 | |
| sec-Butylalcohol | C ₄ H ₁₀ O | 0.810 | | 1 240.0 | 4 068.2 | | 3.30 | 3.239 | | 34.851 | |
| n-Butyl bromide (46) | C ₄ H ₉ Br | 1.276 | 20 °C | 1 019.0 | 20 °C 3 343.2 | 68 °F | | 0.490 | 15 °C | 5.272 | 59 °C |
| n-Butyl chloride (22,46) | C ₄ H ₉ Cl | 0.887 | | 1 140.0 | 3 740.2 | | 4.57 | 0.529 | 15 °C | 5.692 | 59 °F |
| Carbon tetrachloride | CCl ₄ | 1.595 | 20 °C | 926.0 | 3 038.1 | | 2.48 | 0.607 | | 6.531 | |
| Carbon tetrafluoride (Freon 14) | CF ₄ | 1.750 | -150 °C | 875.2 | -150 °C 2 871.5 | -238 °F | 6.61 | | | | |
| Chloroform | CHCl ₃ | 1.489 | | 979.0 | 3 211.9 | | 3.40 | 0.550 | | 5.918 | |
| Dichlorodifluoromethane (Freon 12) | CCl ₂ F ₂ | 1.516 | 40 °C | 774.1 | 2 539.7 | | 4.24 | | | | |
| Ethanol | C ₂ H ₆ O | 0.789 | | 1 207.0 | 3 960.0 | | 4.00 | 1.390 | | 14.956 | |
| Ethyl acetate | C ₄ H ₈ O ₂ | 0.901 | | 1 085.0 | 3 559.7 | | 4.40 | 0.489 | | 5.263 | |
| Ethyl alcohol | C ₂ H ₆ O | 0.789 | | 1 207.0 | 3 960.0 | | 4.00 | 1.396 | | 15.020 | |
| Ethyl benzene | C ₈ H ₁₀ | 0.867 | 20 °C | 1 338.0 | 20 °C 4 890.8 | 68 °F | | 0.797 | 17 °C | 8.575 | 63 °F |
| Ether | C ₄ H ₁₀ O | 0.713 | | 985.0 | 3 389.8 | | 4.87 | 0.311 | | 3.346 | |
| Ethyl ether | C ₄ H ₁₀ O | 0.713 | | 985.0 | 3 231.6 | | 4.87 | 0.311 | | 3.346 | |
| Ethylene bromide | C ₂ H ₄ Br ₂ | 2.180 | | 995.0 | 3 264.4 | | | 0.790 | | 8.500 | |
| Ethylene chloride | C ₂ H ₄ Cl ₂ | 1.253 | | 1 193.0 | 3 914.0 | | | 0.610 | | 6.563 | |
| Ethylene glycol | C ₂ H ₆ O ₂ | 1.113 | | 1 658.0 | 5 439.6 | | 2.10 | 17.208 | 20 °C | 185.158 | 68 °F |
| Fluorine | F | 0.545 | -143 °C | 403.0 | -143 °C 1 322.2 | -225 °F | 11.31 | | | | |
| Formaldehyde, methyl ester | C ₂ H ₄ O ₂ | 0.974 | | 1 127.0 | 3 697.5 | | 4.02 | | | | |
| Freon R12 | | | | 774.2 | 2 540.0 | | 6.61 | | | | |
| Glycol | C ₂ H ₆ O ₂ | 1.113 | | 1 658.0 | 5 439.6 | | 2.10 | | | | |
| 50 % Ethylene glycol/ 50 % Water | | | | 1 578.0 | 5 177.0 | | | | | | |
| Isopropanol | C ₃ H ₈ O | 0.785 | 20 °C | 1 170.0 | 20 °C 3 838.6 | 68 °F | | 2.718 | | 29.245 | |
| Isopropyl alcohol (46) | C ₃ H ₈ O | 0.785 | 20 °C | 1 170.0 | 20 °C 3 838.6 | 68 °F | | 2.718 | | | |

KATflow 100

TECHNICAL DATA

| All data given at +25 °C (+77 °F) unless otherwise stated | | | | Sound speed | | | | Change of sound speed per °C | | Viscosity (kinematic) | | | |
|--|---|---------------------------------|---------|---------------------|---------|----------------------|---------|--|-----------------------------------|--|-----------|---------|--|
| Substance | Chemical formula | Density g · cm ⁻³ | | m · s ⁻¹ | | ft · s ⁻¹ | | m · s ⁻¹ · °C ⁻¹ | mm ² · s ⁻¹ | 10 ⁻⁶ · ft ² · s ⁻¹ | | | |
| | | | | | | | | | | | | | |
| Kerosene | | 0.810 | | 1 324.0 | | 4 343.8 | | 3.60 | | | | | |
| Methane | CH ₄ | 0.162 | -89 °C | 405.0 | -89 °C | 1 328.7 | -128 °F | 17.50 | | | | | |
| Methanol | CH ₄ O | 0.791 | 20 °C | 1 076.0 | | 3 530.2 | | 292.00 | 0.695 | | 7.478 | | |
| Methyl acetate | C ₃ H ₆ O ₂ | 0.934 | | 1 211.0 | | 3 973.1 | | | 0.407 | | 4.379 | | |
| Methyl alcohol | CH ₄ O | 0.791 | | 1 076.0 | | 3 530.2 | | 292.00 | 0.695 | | 7.478 | | |
| Methyl benzene | C ₇ H ₈ | 0.867 | | 1 328.0 | 20 °C | 4 357.0 | 68 °F | 4.27 | 0.644 | | 7.144 | | |
| Milk, homogenised | | | | 1 548.0 | | 5 080.0 | | | | | | | |
| Naphtha | | 0.760 | | 1 225.0 | | 4 019.0 | | | | | | | |
| Natural gas | | 0.316 | -103 °C | 753.0 | -103 °C | 2 470.5 | -153 °F | | | | | | |
| Nitrogen | N ₂ | 0.808 | -199 °C | 962.0 | -199 °C | 3 156.2 | -326 °F | | 0.217 | -199 °C | 2.334 | -326 °F | |
| Oil, Car (SAE 20a.30) | | 1.740 | | 870.0 | | 2 854.3 | | | 190.000 | | 2 045.093 | | |
| Oil, Castor | C ₁₁ H ₁₀₀ O | 0.969 | | 1 477.0 | | 4 845.8 | | 3.60 | 0.670 | | 7.209 | | |
| Oil, Diesel | | 0.800 | | 1 250.0 | | 4 101.0 | | | | | | | |
| Oil, Fuel AA gravity | | 0.990 | | 1 485.0 | | 4 872.0 | | 3.70 | | | | | |
| Oil (Lubricating X200) | | | | 1 530.0 | | 5 019.9 | | | | | | | |
| Oil (Olive) | | 0.912 | | 1 431.0 | | 4 694.9 | | 2.75 | 100.000 | | 1 076.365 | | |
| Oil (Peanut) | | 0.936 | | 1 458.0 | | 4 738.5 | | | | | | | |
| Propane (-45 to -130 °C) | C ₃ H ₈ | 0.585 | -45 °C | 1 003.0 | -45 °C | 3 290.6 | -49 °F | 5.70 | | | | | |
| 1-Propanol | C ₃ H ₈ O | 0.780 | 20 °C | 1 222.0 | 20 °C | 4 009.2 | 68 °F | | | | | | |
| 2-Propanol | C ₃ H ₈ O | 0.785 | 20 °C | 1 170.0 | 20 °C | 3 838.6 | 68 °F | | 2.718 | | 29.245 | | |
| Propene | C ₃ H ₆ | 0.563 | -13 °C | 963.0 | 13 °C | 3 159.4 | 9 °F | 6.32 | | | | | |
| n-Propylalcohol | C ₃ H ₈ O | 0.780 | 20 °C | 1 222.0 | 20 °C | 4 009.2 | 68 °F | | 2.549 | | 27.427 | | |
| Propylene | C ₃ H ₆ | 0.563 | -13 °C | 963.0 | -13 °C | 3 159.4 | 9 °F | 6.32 | | | | | |
| Refrigerant 11 | CCl ₃ F | 1.490 | | 828.3 | 0 °C | 2 717.5 | 32 °F | 3.56 | | | 8.500 | | |
| Refrigerant 12 | CCl ₂ F ₂ | 1.516 | -40 °C | 774.1 | -40 °C | 2 539.7 | -40 °C | 4.24 | | | | | |
| Refrigerant 14 | CF ₄ | 1.750 | -150 °C | 875.2 | -150 °C | 2 871.6 | -268 °F | 6.61 | | | | | |
| Refrigerant 21 | CHCl ₂ F | 1.426 | 0 °C | 891.0 | 0 °C | 2 923.2 | 32 °F | 3.97 | | | | | |
| Refrigerant 22 | CHClF ₂ | 1.491 | -69 °C | 893.9 | 50 °C | 2 923.2 | 32 °F | 4.79 | | | | | |
| Refrigerant 113 | CCl ₂ F- CClF ₂ | 1.563 | | 783.7 | 0 °C | 2 571.2 | 32 °F | 3.44 | | | | | |
| Refrigerant 114 | CClF ₂ - CClF ₂ | 1.455 | | 665.3 | -10 °C | 2 182.7 | 14 °F | 3.73 | | | | | |
| Refrigerant 115 | C ₂ ClF ₅ | | | 656.4 | -50 °C | 2 153.5 | -58 °F | 4.42 | | | | | |
| Refrigerant C318 | C ₄ F ₈ | 1,620 | -20 °C | 574.0 | -10 °C | 1 883.2 | 14 °F | 3.88 | | | | | |
| Sodium nitrate | NaNO ₃ | 1.884 | 336 °C | 1 763.3 | 336 °C | 5 785.1 | 637 °F | 0.74 | 1.370 | 336 °C | 14.740 | 637 °F | |
| Sodium nitrite | NaNO ₂ | 1.805 | 292 °C | 1 876.8 | 292 °C | 6 157.5 | 558 °F | | | | | | |
| Sulphur | S | | | 1 177.0 | 250 °C | 3 861.5 | 482 °F | -1.13 | | | | | |
| Sulphuric Acid | H ₂ SO ₄ | 1.841 | | 1 257.6 | | 4 126.0 | | 1.43 | 11.160 | | 120.081 | | |
| Tetrachloroethane | C ₂ H ₂ Cl ₄ | 1.553 | 20 °C | 1 170.0 | 20 °C | 3 838.6 | 68 °F | | 1.190 | | 12.804 | | |
| Tetrachloroethene | C ₂ Cl ₄ | 1.632 | | 1 036.0 | | 3 399.0 | | | | | | | |
| Tetrachloromethane | CCl ₄ | 1.595 | 20 °C | 926.0 | | 3 038.1 | | | 0.607 | | 6.531 | | |
| Tetrafluoromethane (Freon 14) | CF ₄ | 1.750 | -150 °C | 875.2 | -150 °C | 2 871.5 | -283 °F | 6.61 | | | | | |

KATflow 100

TECHNICAL DATA

| All data given at +25 °C (+77 °F) unless otherwise stated | | | | Sound speed | | | | Change of sound speed per °C | Viscosity (kinematic) | | | | |
|--|-------------------------------|---------------------------------|-------------------------------|---------------------|-------|----------------------|-------|---------------------------------|--|-----------------------------------|------|--|-------|
| Substance | Chemical formula | Density g · cm ⁻³ | | m · s ⁻¹ | | ft · s ⁻¹ | | | m · s ⁻¹ · °C ⁻¹ | mm ² · s ⁻¹ | | 10 ⁻⁶ · ft ² · s ⁻¹ | |
| | | Toluene | C ₇ H ₈ | 0.867 | 20 °C | 1 328.0 | 20 °C | 4 357.0 | | 68 °F | 4.27 | | 0.644 |
| Toluol | C ₇ H ₈ | 0.866 | | 1 308.0 | | 4 291.3 | | 4.20 | | 0.580 | | 6.240 | |
| Trichlorofluoromethane (Freon 11) | CCl ₃ F | 1.490 | | 828.3 | 0 °C | 2 717.5 | 32 °F | 3.56 | | | | | |
| Turpentine | | 0.880 | | 1 255.0 | | 4 117.5 | | | | 1.400 | | 15.064 | |
| Water, distilled | H ₂ O | 0.996 | | 1 498.0 | | 4 914.7 | | -2.40 | | 1.000 | | 10.760 | |
| Water, heavy | D ₂ O | | | 1 400.0 | | 4 593.0 | | | | | | | |
| Water, sea | | 1.025 | | 1 531.0 | | 5 023.0 | | -2.40 | | 1.000 | | 10.760 | |

Table 27: Technical data of fluids

8.3 Dependence between temperature and sound speed in water

| Temperature | | Sound speed in water | |
|-------------|-------|----------------------|-------|
| °C | °F | m/s | ft/s |
| 0 | 32.0 | 1 402 | 4 600 |
| 1 | 33.8 | 1 407 | 4 616 |
| 2 | 35.6 | 1 412 | 4 633 |
| 3 | 37.4 | 1 417 | 4 649 |
| 4 | 39.2 | 1 421 | 4 662 |
| 5 | 41.0 | 1 426 | 4 679 |
| 6 | 42.8 | 1 430 | 4 692 |
| 7 | 44.6 | 1 434 | 4 705 |
| 8 | 46.4 | 1 439 | 4 721 |
| 9 | 48.2 | 1 443 | 4 734 |
| 10 | 50.0 | 1 447 | 4 748 |
| 11 | 51.8 | 1 451 | 4 761 |
| 12 | 53.6 | 1 455 | 4 774 |
| 13 | 55.4 | 1 458 | 4 784 |
| 14 | 57.2 | 1 462 | 4 797 |
| 15 | 59.0 | 1 465 | 4 807 |
| 16 | 60.8 | 1 469 | 4 820 |
| 17 | 62.6 | 1 472 | 4 830 |
| 18 | 64.4 | 1 476 | 4 843 |
| 19 | 66.2 | 1 479 | 4 853 |
| 20 | 68.0 | 1 482 | 4 862 |
| 21 | 69.8 | 1 485 | 4 872 |
| 22 | 71.6 | 1 488 | 4 882 |
| 23 | 73.4 | 1 491 | 4 892 |
| 24 | 75.2 | 1 493 | 4 899 |
| 25 | 77.0 | 1 496 | 4 908 |
| 26 | 78.8 | 1 499 | 4 918 |
| 27 | 80.6 | 1 501 | 4 925 |
| 28 | 82.4 | 1 504 | 4 935 |
| 29 | 84.2 | 1 506 | 4 941 |
| 30 | 86.0 | 1 509 | 4 951 |
| 31 | 87.8 | 1 511 | 4 958 |
| 32 | 89.6 | 1 513 | 4 964 |
| 33 | 91.4 | 1 515 | 4 971 |
| 34 | 93.2 | 1 517 | 4 977 |
| 35 | 95.0 | 1 519 | 4 984 |
| 36 | 96.8 | 1 521 | 4 984 |
| 37 | 98.6 | 1 523 | 4 990 |
| 38 | 100.4 | 1 525 | 4 997 |
| 39 | 102.2 | 1 527 | 5 010 |
| 40 | 104.0 | 1 528 | 5 013 |
| 41 | 105.8 | 1 530 | 5 020 |
| 42 | 107.6 | 1 532 | 5 026 |
| 43 | 109.4 | 1 534 | 5 033 |
| 44 | 111.2 | 1 535 | 5 036 |
| 45 | 113.0 | 1 536 | 5 040 |
| 46 | 114.8 | 1 538 | 5 046 |
| 47 | 116.6 | 1 538 | 5 049 |
| 48 | 118.4 | 1 540 | 5 053 |
| 49 | 120.2 | 1 541 | 5 056 |
| 50 | 122.0 | 1 543 | 5 063 |

KATflow 100

TECHNICAL DATA

| Temperature | | Sound speed in water | |
|-------------|-------|----------------------|-------|
| °C | °F | m/s | ft/s |
| 51 | 123.8 | 1 543 | 5 063 |
| 52 | 125.6 | 1 544 | 5 066 |
| 53 | 127.4 | 1 545 | 5 069 |
| 54 | 129.2 | 1 546 | 5 072 |
| 55 | 131.0 | 1 547 | 5 076 |
| 56 | 132.8 | 1 548 | 5 079 |
| 57 | 134.6 | 1 548 | 5 079 |
| 58 | 136.4 | 1 548 | 5 079 |
| 59 | 138.2 | 1 550 | 5 086 |
| 60 | 140.0 | 1 550 | 5 086 |
| 61 | 141.8 | 1 551 | 5 089 |
| 62 | 143.6 | 1 552 | 5 092 |
| 63 | 145.4 | 1 552 | 5 092 |
| 64 | 147.2 | 1 553 | 5 092 |
| 65 | 149.0 | 1 553 | 5 095 |
| 66 | 150.8 | 1 553 | 5 095 |
| 67 | 152.6 | 1 554 | 5 099 |
| 68 | 154.4 | 1 554 | 5 099 |
| 69 | 156.2 | 1 554 | 5 099 |
| 70 | 158.0 | 1 554 | 5 099 |
| 71 | 159.8 | 1 554 | 5 099 |
| 72 | 161.6 | 1 555 | 5 102 |
| 73 | 163.4 | 1 555 | 5 102 |
| 74 | 165.2 | 1 555 | 5 102 |
| 75 | 167.0 | 1 555 | 5 102 |
| 76 | 167.0 | 1 555 | 5 102 |
| 77 | 170.6 | 1 554 | 5 099 |
| 78 | 172.4 | 1 554 | 5 099 |
| 79 | 174.2 | 1 554 | 5 099 |
| 80 | 176.0 | 1 554 | 5 099 |
| 81 | 177.8 | 1 554 | 5 099 |
| 82 | 179.6 | 1 553 | 5 095 |
| 83 | 181.4 | 1 553 | 5 095 |
| 84 | 183.2 | 1 553 | 5 095 |
| 85 | 185.0 | 1 552 | 5 092 |
| 86 | 186.8 | 1 552 | 5 092 |
| 87 | 188.6 | 1 552 | 5 092 |
| 88 | 190.4 | 1 551 | 5 089 |
| 89 | 192.2 | 1 551 | 5 089 |
| 90 | 194.0 | 1 550 | 5 086 |
| 91 | 195.8 | 1 549 | 5 082 |
| 92 | 197.6 | 1 549 | 5 082 |
| 93 | 199.4 | 1 548 | 5 079 |
| 94 | 201.2 | 1 547 | 5 076 |
| 95 | 203.0 | 1 547 | 5 076 |
| 96 | 204.8 | 1 546 | 5 072 |
| 97 | 206.6 | 1 545 | 5 069 |
| 98 | 208.4 | 1 544 | 5 066 |
| 99 | 210.2 | 1 543 | 5 063 |
| 100 | 212.0 | 1 543 | 5 063 |
| 104 | 220.0 | 1 538 | 5 046 |
| 110 | 230.0 | 1 532 | 5 026 |
| 116 | 240.0 | 1 524 | 5 000 |
| 121 | 250.0 | 1 516 | 5 007 |

| Temperature | | Sound speed in water | |
|-------------|-------|----------------------|-------|
| °C | °F | m/s | ft/s |
| 127 | 260.0 | 1 507 | 4 944 |
| 132 | 270.0 | 1 497 | 4 912 |
| 138 | 280.0 | 1 487 | 4 879 |
| 143 | 290.0 | 1 476 | 4 843 |
| 149 | 300.0 | 1 465 | 4 807 |
| 154 | 310.0 | 1 453 | 4 767 |
| 160 | 320.0 | 1 440 | 4 725 |
| 166 | 330.0 | 1 426 | 4 679 |
| 171 | 340.0 | 1 412 | 4 633 |
| 177 | 350.0 | 1 398 | 4 587 |
| 182 | 360.0 | 1 383 | 4 538 |
| 188 | 370.0 | 1 368 | 4 488 |
| 193 | 380.0 | 1 353 | 4 439 |
| 199 | 390.0 | 1 337 | 4 387 |
| 204 | 400.0 | 1 320 | 4 331 |
| 210 | 410.0 | 1 302 | 4 272 |
| 216 | 420.0 | 1 283 | 4 210 |
| 221 | 430.0 | 1 264 | 4 147 |
| 227 | 440.0 | 1 244 | 4 082 |
| 232 | 450.0 | 1 220 | 4 003 |
| 238 | 460.0 | 1 200 | 3 937 |
| 243 | 470.0 | 1 180 | 3 872 |
| 249 | 480.0 | 1 160 | 3 806 |
| 254 | 490.0 | 1 140 | 3 740 |
| 260 | 500.0 | 1 110 | 3 642 |

Table 28: Temperature and sound speed in water

KATflow 100

SPECIFICATION

9 SPECIFICATION

9.1 General

| | |
|---|--|
| Measuring principle | Ultrasonic time difference correlation principle |
| Flow velocity range | 0.01 ... 25 m/s |
| Resolution | 0.25 mm/s |
| Repeatability | 0.15 % of measured value, ± 0.015 m/s |
| Accuracy | Volume flow: $\pm 1 \dots 3$ % of measured value depending on application ± 0.5 % of measured value with process calibration Flow velocity (mean): ± 0.5 % of measured value |
| Turn down ratio | 1/100 |
| Gaseous and solid content of liquid media | < 10 % of volume |

9.2 Flowmeter

| | |
|-------------------------------|---|
| Enclosure type | Wall or pipe mounted housing |
| Degree of protection | IP 66 according EN 60529 |
| Operating temperature | -10 ... +60 °C (+14 ... +140 °F) |
| Housing material | Die-cast aluminium |
| Measurement channels | 1 |
| Power supply | 100 ... 240 V AC 50/60 Hz, 9 ... 36 V DC, specials on request |
| Display | Optional LCD graphic display, 128 x 64 dots, backlit |
| Keypad | Optional four button internal keypad or programmer |
| Dimensions | 228 (h) x 72/124 (w) x 58 (d) mm (without cable glands) |
| Weight | Approx. 750 g |
| Power consumption | < 5 W |
| Signal damping | 0 ... 99 s (selectable by user) |
| Transit time measurement rate | 100 Hz (standard) |
| Output update time | 1 s, faster rates on application |
| Operating languages | Czech, Dutch, English, French, German, Italian, Romanian, Russian, Spanish, Turkish (others on request) |

9.3 Quantity and units of measurement

| | |
|----------------------|---|
| Volumetric flow rate | m ³ /h, m ³ /min, m ³ /s, l/h, l/min, l/s USgal/h (US gallons per hour), USgal/min, USgal/s bbl/d (barrels per day), bbl/h, bbl/min, bbl/s |
| Flow velocity | m/s, ft/s, inch/s |
| Mass flow rate | g/s, t/h, kg/h, kg/min |
| Volume | m ³ , l, gal (US gallons), bbl |
| Mass | g, kg, t |
| Heat flow | W, kW, MW (only with heat quantity measurement option) |
| Heat quantity | J, kJ, kWh (only with heat quantity measurement option) |
| Temperature | T in , T out, CU (housing temperature) in °C |
| Speed of sound | c in m/s |
| Signal quality | Signal in dB, Noise in dB, SNR (signal-to-noise ratio) |

9.4 Internal data logger

| | |
|------------------|--|
| Storage capacity | Approx. 30 000 measurements (each comprising up to 10 selectable measurement units), logger size 5 MB Approx. 100 000 measurements (each comprising up to 10 selectable measurement units), logger size 16 MB |
| Logging data | All measured and totalised values, parameter sets |

9.5 Communication

| | |
|------------------|--|
| Serial interface | RS 232 |
| Data | Instantaneous measured value, parameter set and configuration, logged data |

9.6 KATdata+ software

| | |
|-------------------|---|
| Functionality | Download of measured values/parameter sets, graphical presentation, list format, export to third party software, online transfer of measured data |
| Operating systems | Windows 10, 8, 7, Vista, XP, NT, 2000, Linux, Mac (optional) |

KATflow 100

SPECIFICATION

9.7 Process inputs



A maximum of five input and output slots can be used.
All process outputs are galvanically isolated from the device electronics and from other inputs/outputs.

| | |
|-------------|--|
| Temperature | Pt 100, four-wire circuit Measurement range: -50 ... +400 °C (-58 ... +752 °F) Resolution: 0.01 K, accuracy: ±0.02 K |
| Current | 0/4 ... 20 mA active or 4 ... 20 mA passive, U = 30 V, R _i = 50 Ω, accuracy: 0.1 % of measured value |



Further process inputs available on application.

9.8 Process outputs



A maximum of five input and output slots can be used.
All process outputs are galvanically isolated from the device electronics and from other inputs/outputs.

| | |
|------------------------------|---|
| Current | 0/4 ... 20 mA active and 4 ... 20 mA passive options Active: U = 30 V, R _{Load} < 500 Ω, 16 bit resolution, accuracy: 0.1 % of measured value Passive: U = 9 ... 30 V, R _{Load} < 500 Ω, 16 bit resolution, accuracy: 0.1 % of measured value |
| Voltage | Range: 0 ... 10 V, R _{Load} = 1 kΩ, C _{Load} = 200 pF, resolution: 16 bit, accuracy: 0.1 % of measured value |
| Digital (open-collector) | Function: Error, Limit Alarm or Totaliser Totaliser value: 0.01 ... 1 000/unit, width: 1 ... 990 ms, U = 24 V, I _{max} = 4 mA, NO and NC contacts |
| Digital (relay) | Function: Error, Limit Alarm or Totaliser Totaliser value: 0.01 ... 1 000/unit, width: 1 ... 990 ms, U = 48 V, I _{max} = 250 mA, NO and NC contacts |
| Analogue frequency (passive) | 2 Hz ... 10 kHz, U = 24 V, I _{max} = 4 mA |
| HART® | HART-compatible output: 4 process variables selectable (PV, SV, TV and FV), Analogue: 4 ... 20 mA passive, R _{Load} = 220 Ω, U = 24 V, accuracy: 0.1 % of measured value |



Further process outputs available on application.

9.9 Sensors: K1P, K1L, K1N, K1E

| Sensor type | K1P | K1L | K1N/E |
|----------------------------|--|----------------------------------|--|
| Pipe diameter range | 50 ... 500 mm | 50 ... 6 500 mm | 50 ... 3 000 mm |
| Temperature range | -20 ... +60 °C (-4 ... +140 °F) | -30 ... +80 °C (-22 ... +176 °F) | K1N: -30 ... +130 °C (-22 ... +266 °F) K1E: -30 ... +250 °C (-22 ... +482 °F) (for short periods up to +300 °C (+572 °F)) |
| Material of cable conduits | PVC | PVC | Stainless steel |
| Standard cable lengths | 10.0 m | 5.0 m, 10.0 m, 30.0 m | 4.0 m |
| Dimensions of sensor heads | 40 (h) x 30 (w) x 30 (d) mm | 60 (h) x 30 (w) x 34 (d) mm | 60 (h) x 30 (w) x 34 (d) mm |
| Material of sensor heads | PEEK | Stainless steel | Stainless steel |
| Degree of protection | IP 66 according to EN 60529 (IP 67 and IP 68 on request) | | |

9.10 Sensors: K4L, K4N, K4E

| Sensor type | K4L | K4N | K4E |
|----------------------------|--|-----------------------------------|---|
| Pipe diameter range | 10 ... 250 mm | 10 ... 250 mm | 10 ... 250 mm |
| Temperature range | -30 ... +80 °C (-22 ... +176 °F) | -30 ... +130 °C (-22 ... +266 °F) | -30 ... +250 °C (-22 ... +482 °F) (for short periods up to +300 °C (+572 °F)) |
| Material of cable conduits | PVC | Stainless steel | Stainless steel |
| Standard cable lengths | 5.0 m, 10.0 m | 2.5 m | 2.5 m |
| Dimensions of sensor heads | 43 (h) x 18 (w) x 22 (d) mm | 43 (h) x 18 (w) x 22 (d) mm | 43 (h) x 18 (w) x 22 (d) mm |
| Material of sensor heads | Stainless steel | Stainless steel | Stainless steel |
| Degree of protection | IP 66 according to EN 60529 (IP 67 and IP 68 on request) | | |

KATflow 100

INDEX

10 INDEX

| | | | |
|----------------------------------|---------------------------------------|-----------------------------|------------------------|
| Acoustic coupling gel | 18 | Sensor configuration | 12 |
| Analogue current input | 33, 41 | Sensor location | 8, 19 |
| Analogue current output | 31, 38 | Sensor mounting | 7, 9, 12, 18, 19 |
| Analogue frequency output | 31, 39 | Sensor positioning screen | 19, 25 |
| Analogue voltage output | 31, 39 | Sensor separation | 19 |
| Certificate of Conformity | 59 | Serial interface | 37, 55 |
| Commissioning | 28 | Setup Wizard | 24, 25, 28 |
| Contrast | 21 | Software KATdata+ | 42, 46, 55 |
| Customer Return Note (CRN) | 5, 43, 60 | SOS (speed of sound) | 28, 42 |
| Data logger | 23, 27, 35, 37, 42, 55 | Sound velocity measurement | 42 |
| Diagnostic displays | 26, 27 | Specification | 54 |
| Diagnostics | 11, 35 | Storage | 4, 7, 55 |
| Diagonal Mode | 12, 18, 25 | Switching on/off | 21 |
| Digital open-collector output | 32, 39 | Temperature compensation | 42 |
| Digital relay output | 32, 40 | Three-line display | 26, 27 |
| Dimensions | 13, 54, 57 | Totaliser | 26, 27, 29, 39, 40, 56 |
| Display | 21-24, 26, 27, 30, 31, 35, 37, 42, 54 | Transit-time method | 6 |
| Display icons | 22 | Troubleshooting | 4, 44 |
| Disturbance sources | 9, 11 | Units of measurement | 55 |
| Electrical connections | 15 | Wall thickness | 8, 12, 19, 25, 29, 30 |
| Error messages | 44 | Warranty | 4, 5 |
| Fluid selection | 24 | Wizard (Quick Setup Wizard) | 24, 25, 28 |
| Fluid temperature | 24, 28 | | |
| HART® compatible output | 33, 38, 56 | | |
| Heat quantity measurement | 42, 55 | | |
| Identification of components | 7 | | |
| Input configuration | 41 | | |
| Installation | 4, 5, 7-9, 13, 18, 26, 30, 35 | | |
| Keypad | 21, 22, 35, 54 | | |
| Legislative requirements | 5 | | |
| Liner material | 25, 29 | | |
| Maintenance | 43 | | |
| Measurements | 6, 8, 9, 24, 25, 33, 55 | | |
| Measuring principle | 6, 54 | | |
| Menu structure | 22, 27, 28, 36, 38-40 | | |
| Modbus RTU | 33, 37 | | |
| Negative separation distance | 12 | | |
| Outer pipe diameter | 24 | | |
| Output configuration | 37 | | |
| Packaging | 4, 7 | | |
| Passes | 12, 19, 25, 29, 30, 44 | | |
| Pipe material selection | 8, 24, 29, 30, 47 | | |
| Pipe parameters | 18 | | |
| Pipe preparation | 11 | | |
| Process value | 26, 42 | | |
| Pt 100 inputs | 41, 56 | | |
| Quick Start | 24, 26, 28 | | |
| Relay output | 32, 40 | | |
| Retaining clip (sensor mounting) | 19 | | |
| Return Policy | 4, 5 | | |
| RS 232 | 36, 37 | | |
| Safety | 4, 5, 43 | | |
| Scope function | 42 | | |

11 APPENDIX A – CERTIFICATE OF CONFORMITY



Declaration of Conformity

We, Katronic Technologies Ltd., declare under our sole responsibility that the product listed below to which this declaration relates are in conformity with the EU directives:

- Directive 2014/30/EU for Electromagnetic Compatibility (EMC)
- Low Voltage Directive 2014/35/EU for Electrical Safety (LVD)
- Directive 2011/65/EU on the Restriction of Hazardous Substances (RoHS)
- BS 8452:2010 – Use of Clamp-On Ultrasonic Flow-Metering Techniques for Fluid Applications
- ASME MFC-5.1:2011 – Measurement of Liquid Flow in Closed Conduits Using Transit-Time Ultrasonic Flowmeters

| Name of Products | Description |
|------------------------------------|---|
| KATflow 100, 150, 200, 210 and 230 | Ultrasonic flowmeter with associated Katronic transducers |

The mentioned products are in conformity with the following European Standards:

| Class | Standard | Description |
|-----------------------|-------------------------------|--|
| EMC Directive | BS EN 61326-1:2013 | Electrical equipment for measurement, control and laboratory use – EMC requirements |
| Immunity | BS EN 61326-1:2013 | Electrical equipment for continuous unattended use |
| | BS EN 61000-4-2:2009 | Electrostatic discharge |
| | BS EN 61000-4-3+A2:2010 | RF field |
| | BS EN 61000-4-4:2012 | Electric fast transient/burst |
| | BS EN 61000-4-5:2014+A1:2017 | Surge |
| | BS EN 61000-4-6:2014 | RF conducted |
| | BS EN 61000-4-11:2014+A1:2017 | AC mains voltage dips and interruption |
| Emission | BS EN 61326-1:2013 | Electrical equipment Class B |
| Low Voltage Directive | BS EN 61010-1:2010 +A1 2019 | Safety requirements for electrical equipment for measurement, control and laboratory use |

Coventry, 10 June 2020

For and on behalf of Katronic Technologies Ltd.

Yours sincerely,

Andrew Sutton
Managing Director

Katronic Technologies Ltd.
Earls Court
Warwick Street
Coventry CV5 6ET
United Kingdom

Tel. +44 (0)2476 714 111
Fax +44 (0)2476 715 446
E-mail info@katronic.co.uk
Web www.katronic.com

VAT No. GB 688 0907 89
Registered in England
Number 3298028
Registered office as shown



KATflow 100

APPENDIX B – Customer Return Note (CRN)

12 APPENDIX B – CUSTOMER RETURN NOTE (CRN)



| | |
|-------------------------------------|----------------------|
| Company | <input type="text"/> |
| Name | <input type="text"/> |
| Tel. No. | <input type="text"/> |
| E-mail | <input type="text"/> |
| Address | <input type="text"/> |
| Instrument model | <input type="text"/> |
| Serial number | <input type="text"/> |
| Katronic contract number (if known) | <input type="text"/> |
| Sensor type(s) | <input type="text"/> |
| Sensor serial number(s) | <input type="text"/> |

The enclosed instrument has been used in the following environment (please mark):

- Nuclear radiation
- Water-endangering
- Toxic
- Caustic
- Biological
- Other (please specify)

We confirm that (please mark),

- we have checked the instrument and sensors are free of any contamination,
- we have neutralised, flushed and decontaminated all parts which have been in contact with hazardous substances and/or environments,
- there is no risk to man or environment through any residual material.

Date

Signature

Company

Stamp